

(Kit Contents continue on following pages)

Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

*Thank You
For Choosing*

SUPERATV.COM[®]

Liability Statement


SuperATV's[®] products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV[®] and is not recommended. SuperATV's[®] products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV[®] to verify that they will work together.


Although SuperATV[®] has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV[®] urges operators and occupants to wear a helmet and appropriate riding gear at all times.


By purchasing and installing SuperATV[®] products, user agrees that should damages occur, SuperATV[®] will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV[®], nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV[®]. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.


SuperATV[®] will warranty only parts provided by SuperATV[®]. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV[®]. SuperATV[®] parts and products are not warranted if item was not installed properly, misused, or modified.

 
(Kit Contents continued)


2x  M5-.80 x 20mm Lg. BHCS

2x  M5-.80 Nylock Nut

5x  M6-1.0 x 20mm Lg. BHCS

2x  M8-1.25 Nylock Nut

2x  M8-1.25 x 20mm Lg. BHCS

5x  M6-1.0 Nylock Nut

5x

Grommet

2x  M5 Flat Washer

2x  M8 Flat Washer


5x  M6 Flat Washer

Install Seal to Cage as shown.

Seal




(Driver Side)


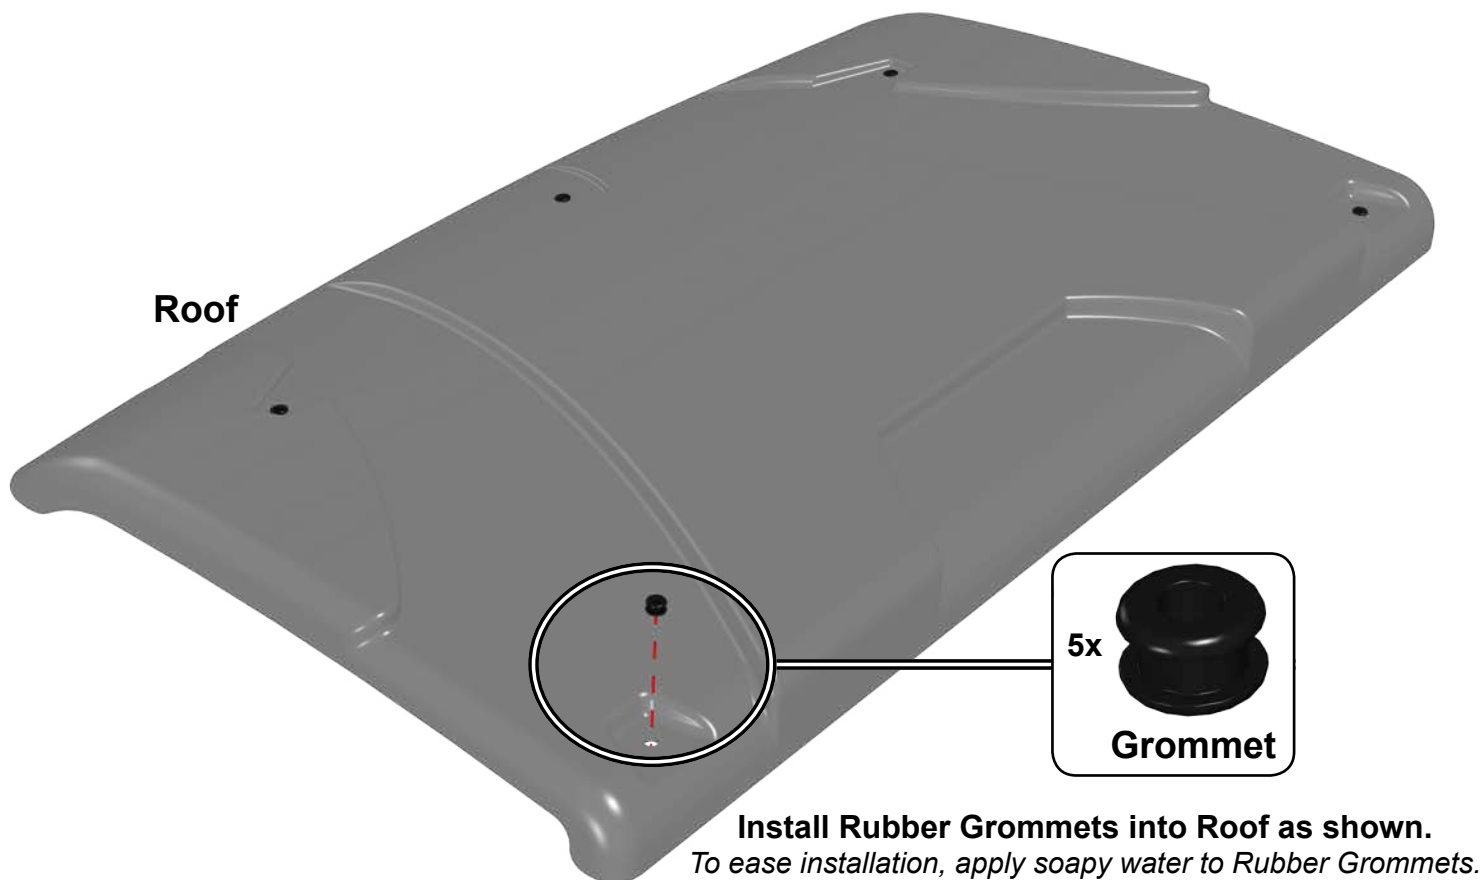


When installing, do not tighten hardware completely unless noted.


- Cut Gasket into (2) equal pieces. Gasket will install between vehicle and Cover Bracket.
- Install Cover Bracket to Frame and with hardware shown.

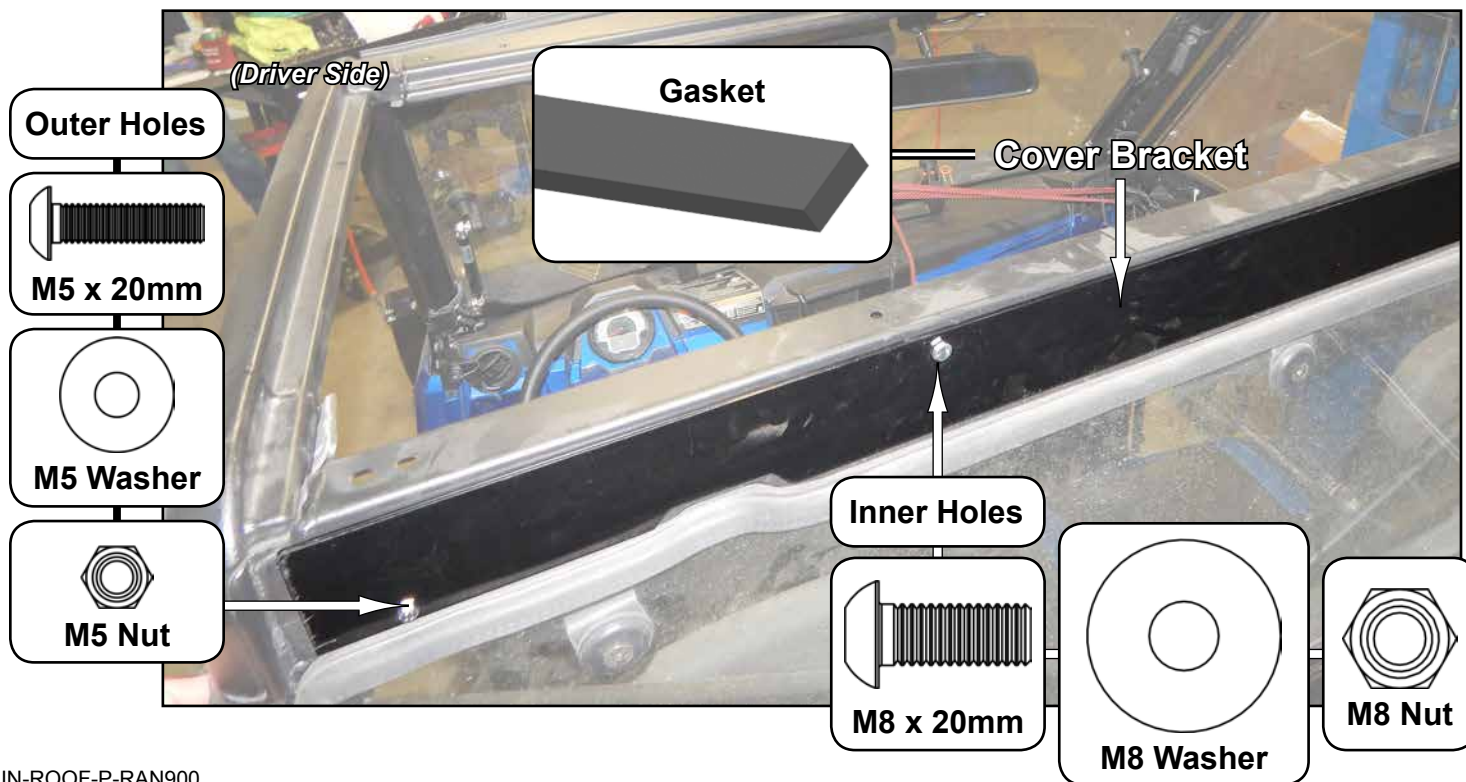

- Install Roof to machine with M6 hardware shown.

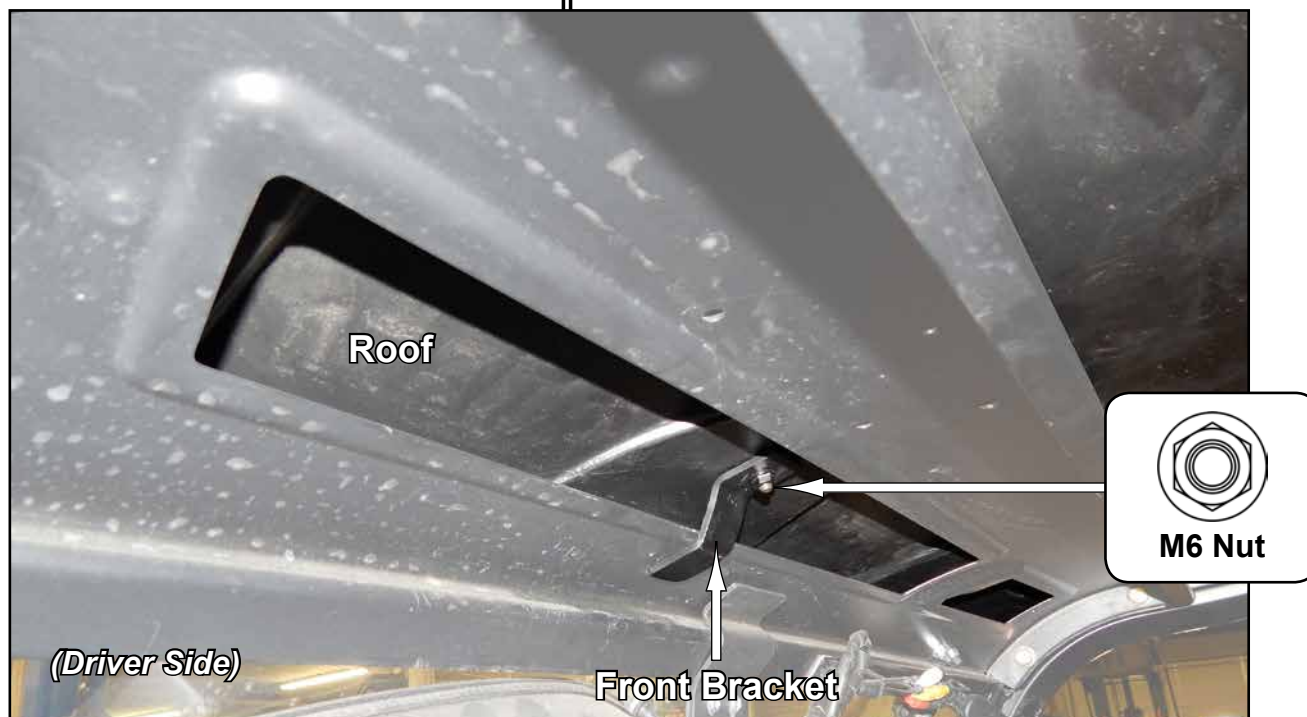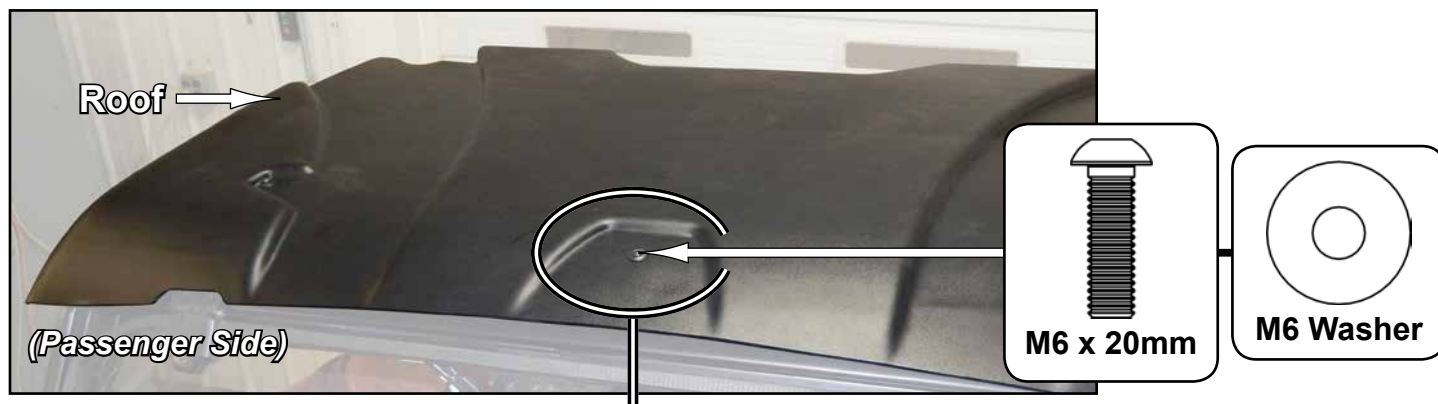

- Install Roof to machine with M6 hardware shown.

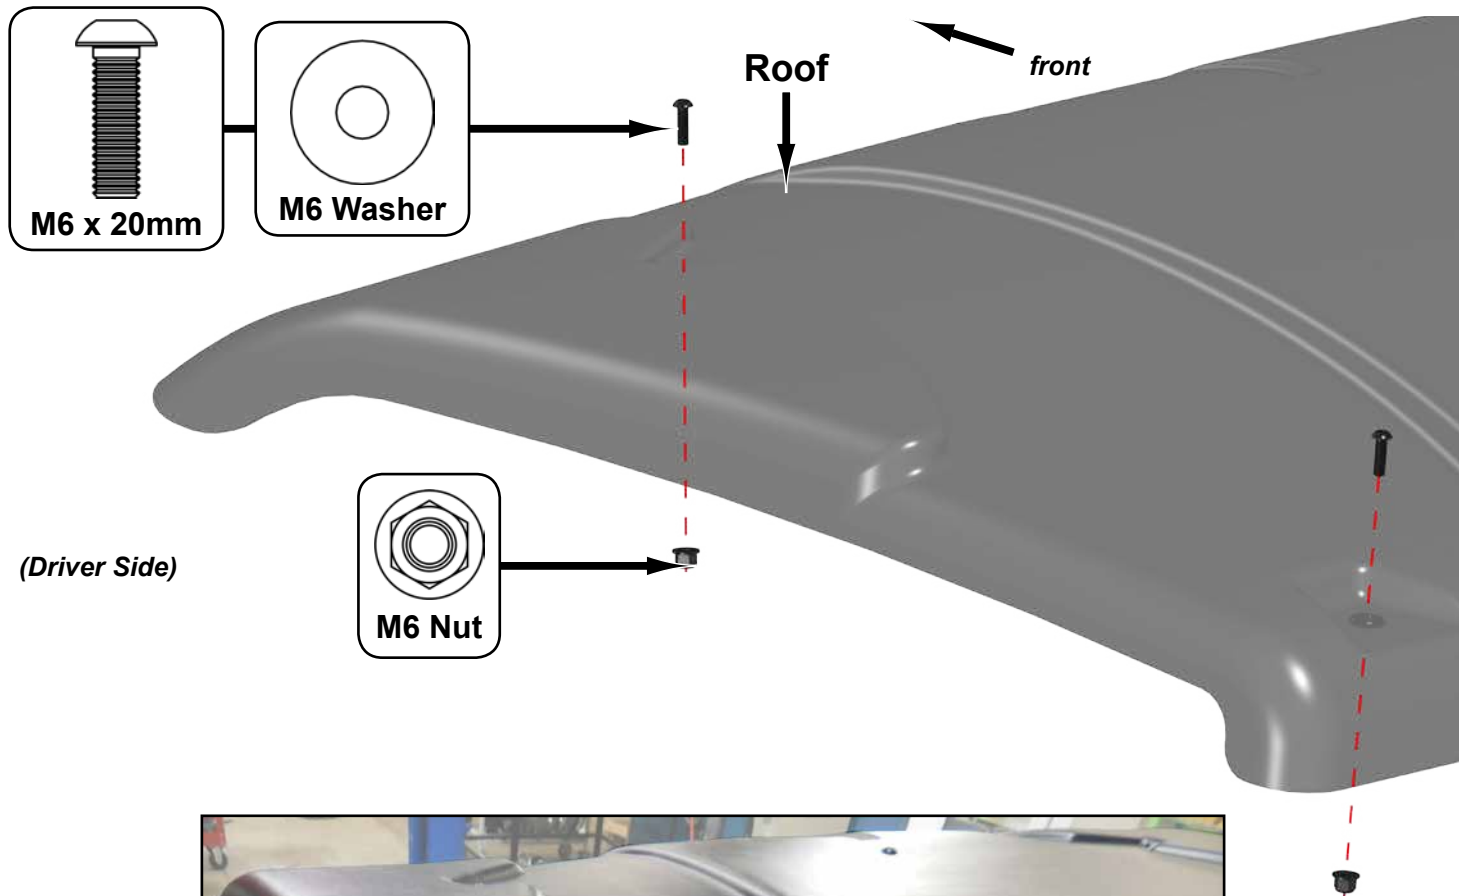

Align Roof to machine and tighten hardware completely