PWC KIT - Trailering Cover

Product:	**Sea-Doo_watercraft**
Project no:	**487803304**
Instruction Sheet P/N:	**487803304**
Revision no:	
Revision date:	
Item covered:	**Trailering Cover**

The following symbols may be used in this document:

> **WARNING**
>
> Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION: Indicates a hazard situation which, if not avoided, could result in minor or moderate injury.

NOTICE **Indicates an instruction which, if not followed, could severely damage vehicle components or other property.**

> **WARNING**
>
> - This kit is designed for specific applicable models only (authorized BRP dealers will confirm model(s)). It is not recommended for units other than the one (those) for which it was sold.
> - Should removal of a locking device (e.g. lock tabs, self-locking fasteners, etc.) be required when undergoing disassembly/ assembly, always replace with a new one.
> - Torque wrench tightening specifications must strictly be adhered to.
> - Unless otherwise specified, engine must be OFF when performing any operation on the vehicle.
> - Always be aware of parts that can move, such as wheels, transmission components, etc.

> **WARNING**
>
> Some important safety information and/or operating instructions dedicated to the end user might be included in this instruction sheet. Make sure to give the kit part number as well as the instruction sheet included with this kit to the customer. Verify that the customer has access to all the information required for proper use of the accessory.

NOTE: USE TIGHTENING TORQUES IN THE FOLLOWING TABLE IF NOT OTHERWISE SPECIFIED.

	GRADE			
	5.8	8.8	10.9	12.9

M4	1.8 ± 0.2 N•m (16 ± 2 lbf•**in**)	2.8 ± 0.2 N•m (25 ± 2 lbf•**in**)	3.8 ± 0.2 N•m (34 ± 2 lbf•**in**)	4.5 ± 0.5 N•m (40 ± 4 lbf•**in**)
M5	3.3 ± 0.2 N•m (29 ± 2 lbf•**in**)	5 ± 0.5 N•m (44 ± 4 lbf•**in**)	7.8 ± 0.7 N•m (69 ± 6 lbf•**in**)	9 ± 1 N•m (80 ± 9 lbf•**in**)
M6	7.5 ± 1 N•m (66 ± 9 lbf•**in**)	10 ± 2 N•m (89 ± 18 lbf•**in**)	12.8 ± 2.2 N•m (113 ± 19 lbf•**in**)	16 ± 2 N•m (142 ± 18 lbf•**in**)
M8	15.3 ± 1.7 N•m (135 ± 15 lbf•**in**)	24.5 ± 3.5 N•m (18 ± 3 lbf•ft)	31.5 ± 3.5 N•m (23 ± 3 lbf•ft)	40 ± 5 N•m (30 ± 4 lbf•ft)
M10	29 ± 3 N•m (21 ± 2 lbf•ft)	48 ± 6 N•m (35 ± 4 lbf•ft)	61 ± 9 N•m (45 ± 7 lbf•ft)	73 ± 7 N•m (54 ± 5 lbf•ft)
M12	52 ± 6 N•m (38 ± 4 lbf•ft)	85 ± 10 N•m (63 ± 7 lbf•ft)	105 ± 15 N•m (77 ± 11 lbf•ft)	128 ± 17 N•m (94 ± 13 lbf•ft)
M14	85 ± 10 N•m (63 ± 7 lbf•ft)	135 ± 15 N•m (100 ± 11 lbf•ft)	170 ± 20 N•m (125 ± 15 lbf•ft)	200 ± 25 N•m (148 ± 18 lbf•ft)
M16	126 ± 14 N•m (93 ± 10 lbf•ft)	205 ± 25 N•m (151 ± 18 lbf•ft)	255 ± 30 N•m (188 ± 22 lbf•ft)	305 ± 35 N•m (225 ± 26 lbf•ft)
M18	170 ± 20 N•m (125 ± 15 lbf•ft)	273 ± 32 N•m (201 ± 24 lbf•ft)	330 ± 25 N•m (243 ± 18 lbf•ft)	413 ± 47 N•m (305 ± 35 lbf•ft)

The illustrations in this document show typical construction of the different assemblies and may not reproduce the full detail or exact shape of the parts; however, they represent parts that have the same or similar function.

Installation time is approximately 0.3 hour.

PARTS TO BE INSTALLED



ITEM	DESCRIPTION	Part number	QTY
P1	Trailering Cover	Not available separately	1

INSTRUCTIONS

Part Installation

1. Place Trailering Cover [P1] on unit starting with the handles.

NOTE: For unit with adjustable handlebar riser, simply adjust to a lower position so you can perfectly fit the cover over the handlebar.

NOTE: Use the yellow handle fabric patches to guide you in positioning the cover over the handlebar.



2. Install front section of the cover on the front nose of the unit.

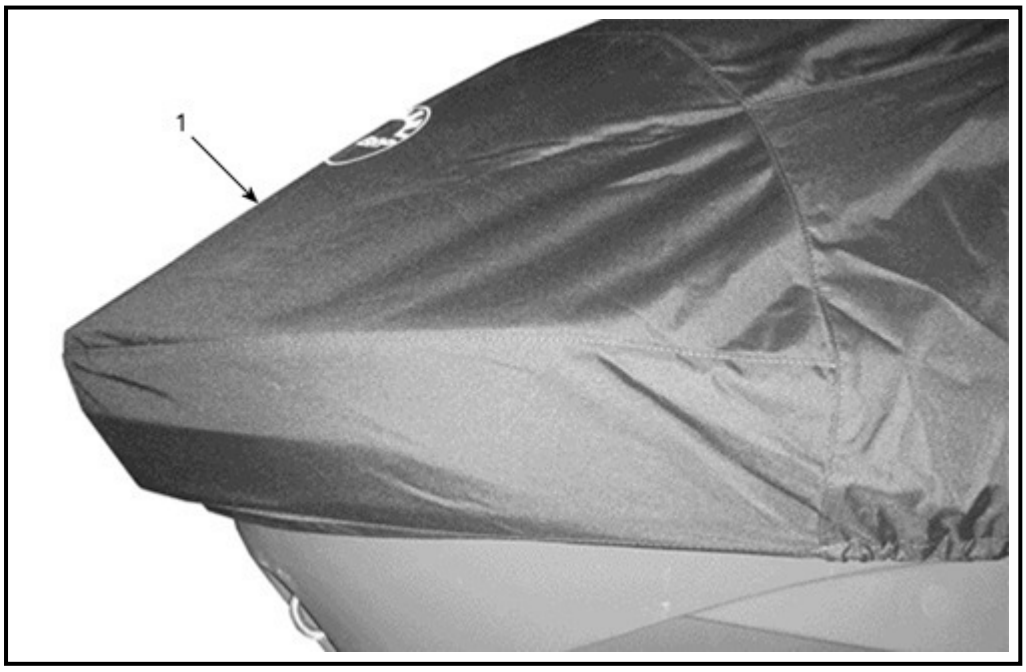

1. Front End

3. Stretch the cover all the way to the back to protect the rear end of the unit.

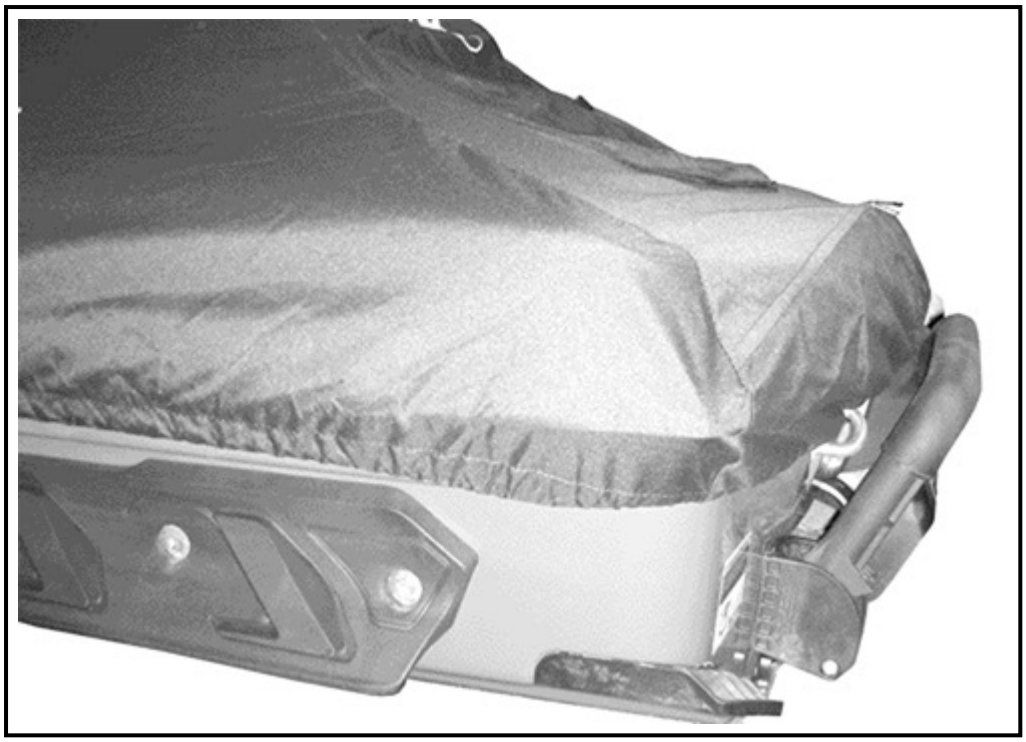

4. Before trailering the unit, make sure to perfectly secure the cover using the two plastic hook on each side. Insert hooks underneath the bumper sides.

NOTE: Plastic hooks are molded to match the bumper sides for easier installation.



1. Plastic Hook

NOTE: Before using this cover for the very first time on the road, you need to tighten the bungee cord to a maximum by following these steps below.

5. Locate the bungee cord knot on the cover front end.

6. Using the knot, tighten the bungee cord to a maximum and redo the knot (the knot needs to be big enough not to slide inside the cover folded seam).

7. Verify if the cover can still easily be installed on the unit.

8. Cut the end of the bungee cord that exceeds the knot and seal the end of the cord by slightly heating it with a lighter or a match to prevent any fraying.

9. Periodically verify the bungee cord tension. (Retighten if needed.)

Special Features

NOTE: This BRP personal watercraft cover has been carefully crafted specifically for mooring and trailering.

NOTE: ALWAYS close any unnecessary openings before trailering the unit.

Some built-in zipped openings are available to give you access such as mooring rope eyelets, fuel cap for refueling and accessories.

For mooring rope eyelets access, simply open the zippers. Tie one end of the rope to the eyelet and the other end to the dock cleat. Close back zippers as much as you can.



MOORING ROPE LATERAL EYELET



MOORING ROPE REAR EYELET

An opening is also available to give you access to the fuel cap for fueling.

> **WARNING**
>
> ALWAYS refer to the appropriate Operator's Guide for the Fueling Procedure.

NOTE: IMPORTANT: Completely open the zipper to prevent any ripping.

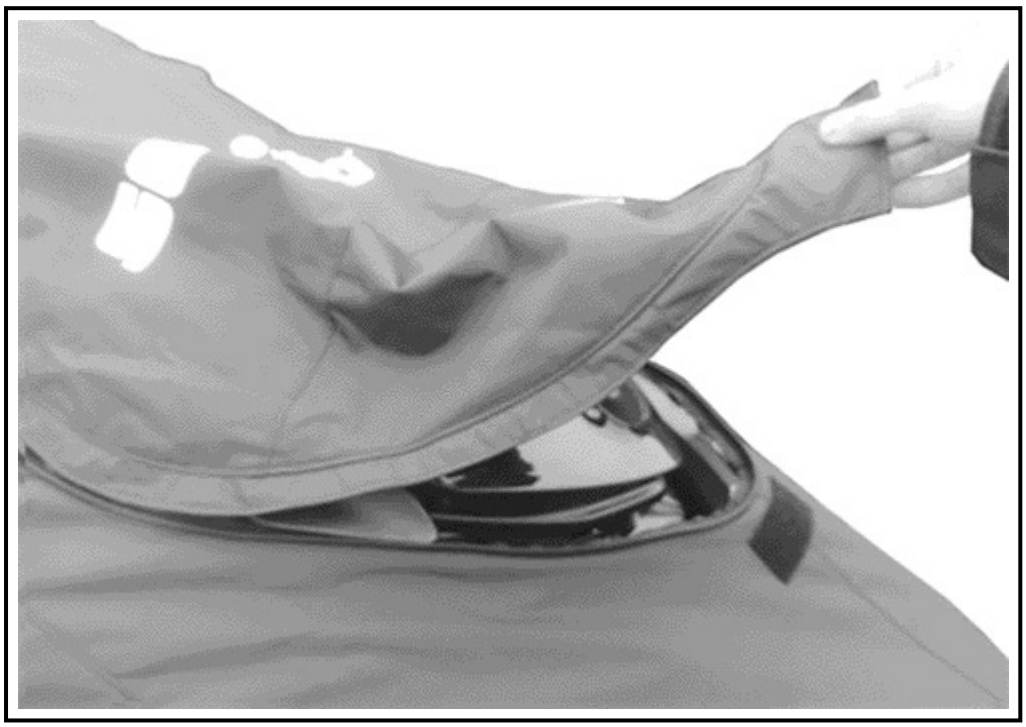

CLOSE the two rear expansion pocket zippers when driver Ergolock™ seat (1-UP) is installed.



OPEN the two rear expansion pocket zippers when passenger seat (2-UP) is installed.



All Models Equipped With LinQ Accessories

1. Open rear cover access and fold it using the hook and loop straps to secure open.



2. Install accessory on LinQ base.



TYPICAL
1. Fuel Caddy
2. LinQ Base

Taking off the cover

For easier reinstall and storage, carefully take off and fold the cover starting by the rear end working your way up to the front.

LIMITED WARRANTY

This Sea-Doo personal watercraft cover benefits from BRP's standard limited warranty for accessories for twelve consecutive months. Warranty liability is limited to cover replacement. Serigraphy or graphics have no warranty whatsoever. For the full text and all the conditions of this limited warranty, please see your authorized Sea-Doo dealer or contact BRP at 1 (888) 272-9222

NOTICE

- Using non BRP accessories on the unit could affect the fitment and may damage the cover

- Avoid prolonged exposure to the sun

- Never apply any load on the installed cover as it is not designed to support loads.

CARE AND MAINTENANCE

This product comes with a maintenance label on the cover. It contains important maintenance information recommended by the manufacturer. Anyone who wants to service this product must first read and understand the information written on the label.

- Wash by hand with mild soap and cold water
- Do not machine wash and/or power wash.
- Do not bleach
- Do not dry-clean.
- Do not tumble dry
- Flat drying