



SKI-DOO KIT - COVER-1 (ALL MODELS)

Product:	Ski-Doo
Project no:	487800888_rev2
Instruction Sheet P/N:	487800888
Revision no:	2
Revision date:	June 2018
Item covered:	COVER-1 (ALL MODELS)

The following symbols may be used in this document:

WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION: Indicates a hazard situation which, if not avoided, could result in minor or moderate injury.

NOTICE Indicates an instruction which, if not followed, could severely damage vehicle components or other property.

WARNING

- This kit is designed for specific applicable models only (authorized BRP dealers will confirm model(s)). It is not recommended for units other than the one (those) for which it was sold.
- Should removal of a locking device (e.g. lock tabs, self-locking fasteners, etc.) be required when undergoing disassembly/ assembly, always replace with a new one.
- Torque wrench tightening specifications must strictly be adhered to.

WARNING

Some important safety information and/or operating instructions dedicated to the end user might be included in this instruction sheet. Make sure to give the kit part number as well as the instruction sheet included with this kit to the customer. Verify that the customer has access to all the information required for proper use of the accessory.

NOTE: The illustrations in this document show typical construction of the different assemblies and may not reproduce the full detail or exact shape of the parts; however, they represent parts that have the same or similar function.

FEATURES

This BRP snowmobile cover has been carefully manufactured specifically for winter use. It features heavy duty, water resistant, mildew proof canvas with genuine Ski-Doo graphics.

RACING, INTENSE and EXPEDITION covers include safety ties and CAN BE USED FOR TRAILERING.

NOTICE STORAGE and COMPACT TRAVEL covers are designed for a storage use only. DO NOT TOW VEHICLE WITH COVER ON.

LIMITED WARRANTY

This snowmobile cover benefits from BRP's standard limited warranty for accessories for twelve consecutive months. Warranty liability is limited to cover replacement. Serigraphies or graphics have no warranty whatsoever. For the full text and all the conditions of this limited warranty, please see your authorized Ski-Doo dealer or contact BRP at 1 (888) 272-9222.

CARE

This product comes with a maintenance label on the cover. It contains important maintenance information recommended by the manufacturer. Anyone who wants to service this product must first read and understand the information written on the label.


NOTICE

- This cover is not made for outdoor summer storage.
- Using non BRP accessories on the unit could affect the fitment and may damage the cover.
- Avoid prolonged exposure to the sun.
- Never apply any load on installed cover. Always remove snow water and sand that accumulate on top of it. This kit is not designed to support loads.
- DO NOT EXCEED 120 km/h (75 MPH)

WARNING LABELS

This product comes with labels containing important information.

Any person who intends to use this product should read and understand the information contained on the labels before doing so.

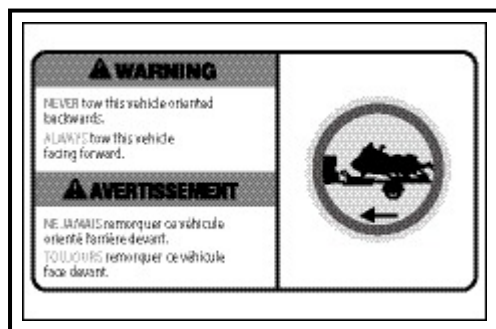

TRAILERING COVER WARNING LABEL


INSTALLATION

WARNING

Some components may be HOT. Always wait for vehicle to cool down before installing cover.

"RAP-CLIP" and ROC System Cover

1. Install the cover over the handlebars and mirrors (use YELLOW patches as indicators).

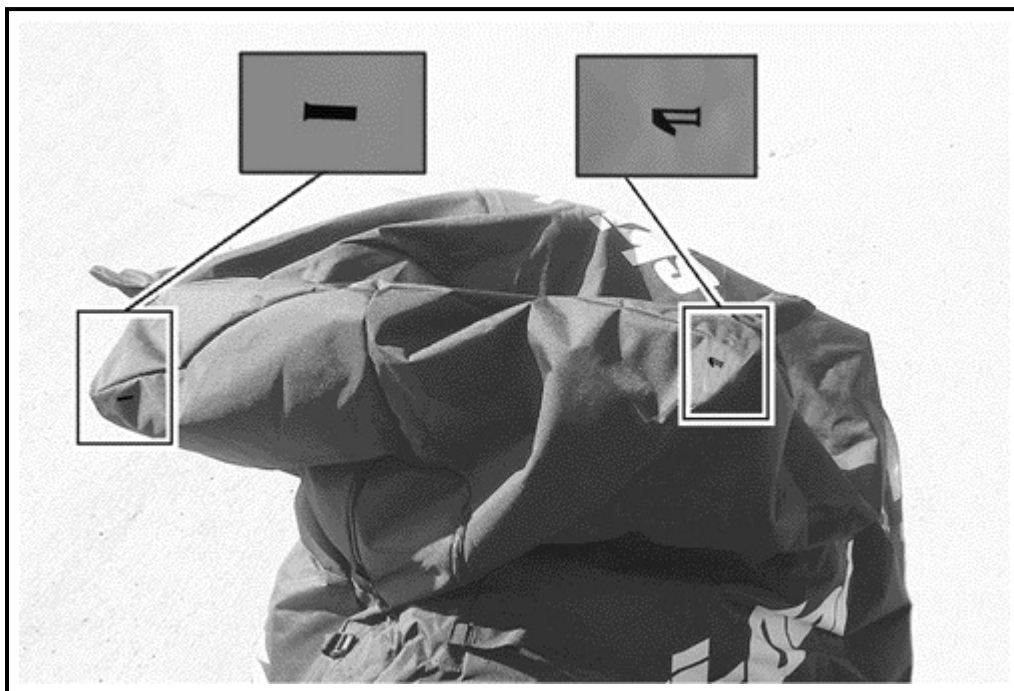


2. From the front of the snowmobile, slip the cover down over the front bumper.



3. At the rear of the snowmobile, pull the cover down over seat, backrest and passenger's handles.



4. Attach the cover around ski legs using quick attachments.

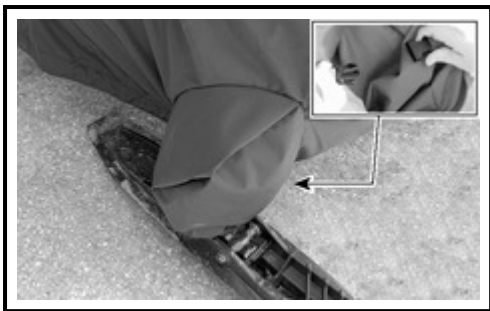

5. Pull rear straps to tighten cover. From underneath of footrest, secure the strap hook in footrest opening.




6. Using RAP-CLIP attachments, secure the lateral section of the cover to footrests.



Models equipped with rear clip

7. Hook the rear clip as illustrated below

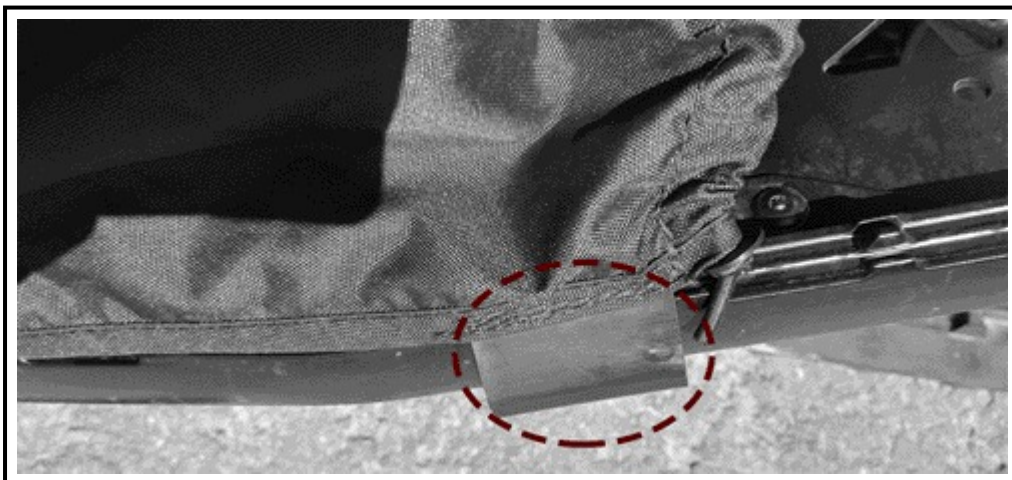

All models

8. Adjust cover by pulling the adjusting strap.



NOTE: This adjustment is required for the first installation only, it can be kept for future installation.

NOTE: Some covers are equipped with belt and buckles top cover tie system, for a tighter cover fit on snowmobile.



BELT AND BUCKLES TIE SYSTEM

NOTICE Make sure gas cap zippered access is closed and top cover belt (if equipped) is correctly adjusted before trailering.


"ROC" system cover

WARNING


- NEVER drive the vehicle with the cover installed for a distance over 10 m (35 ft)
- NEVER have a passenger when you drive the vehicle with the cover installed.
- NEVER exceed a speed of 10 km/h (6 MPH) when the cover is installed.
- NEVER leave the engine running for an extended period of time with the cover installed.
- BEFORE starting the engine always attach the tether cord to your clothing and check proper operation of the throttle and brake levers. They must return to their initial position when released. Turn handlebars all the way in both directions to check for interference and ensure free operation.
- Always engage the parking brake before closing the cover.

Opening the "ROC" system cover

1. Loosen the strap and buckle.

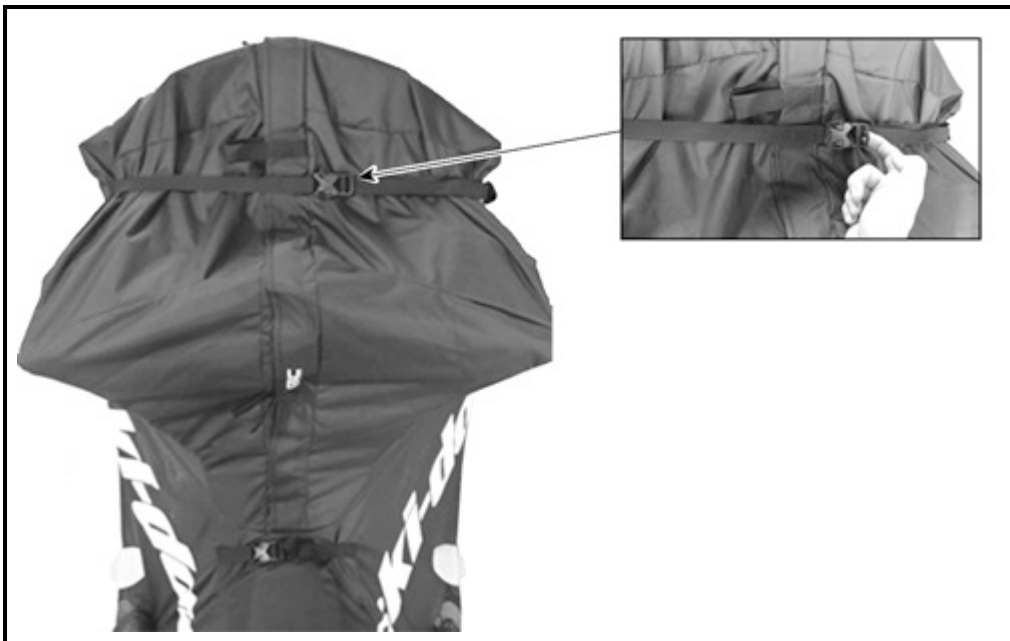


2. Unfasten the buckle.

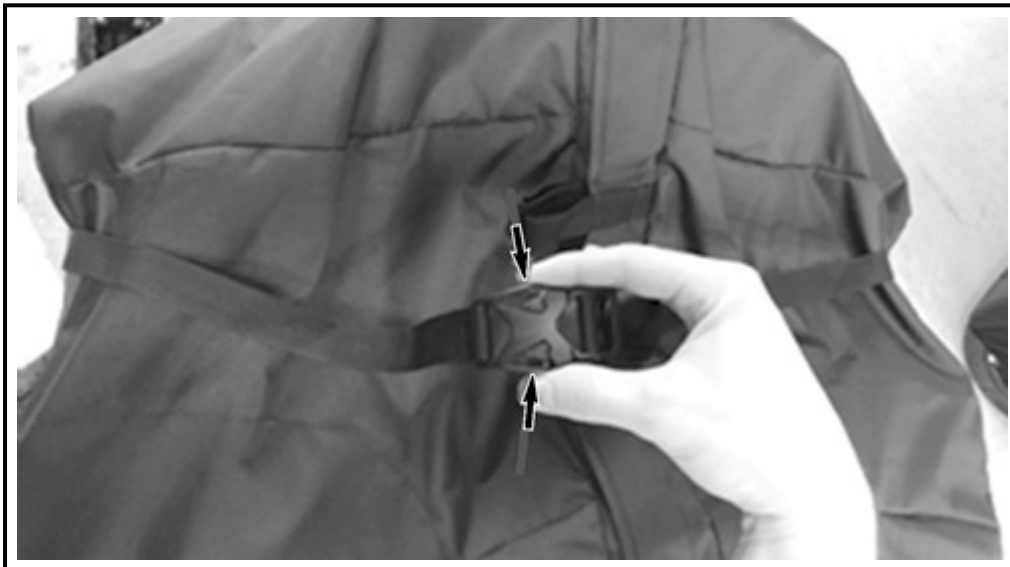

3. Open the "ROC" system cover by pulling the indicated straps.



NOTICE Be careful to completely loosen the self gripping strip.

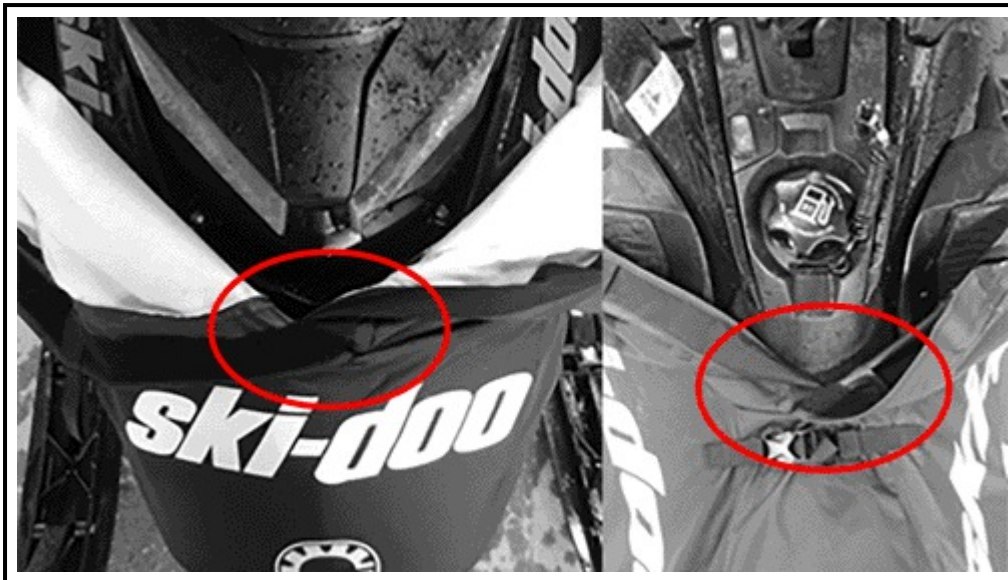

NOTICE While moving the unit, use the areas identified by a foot to step on with your boots




NOTICE Do not move a vehicle with an open "ROC" system cover during a towing. This could damage the cover.

Closing the "ROC" system cover


1. Lash the entire self gripping strip while trying to align the handles together in order to stretch the cover as much as possible



2. Fasten the buckle.

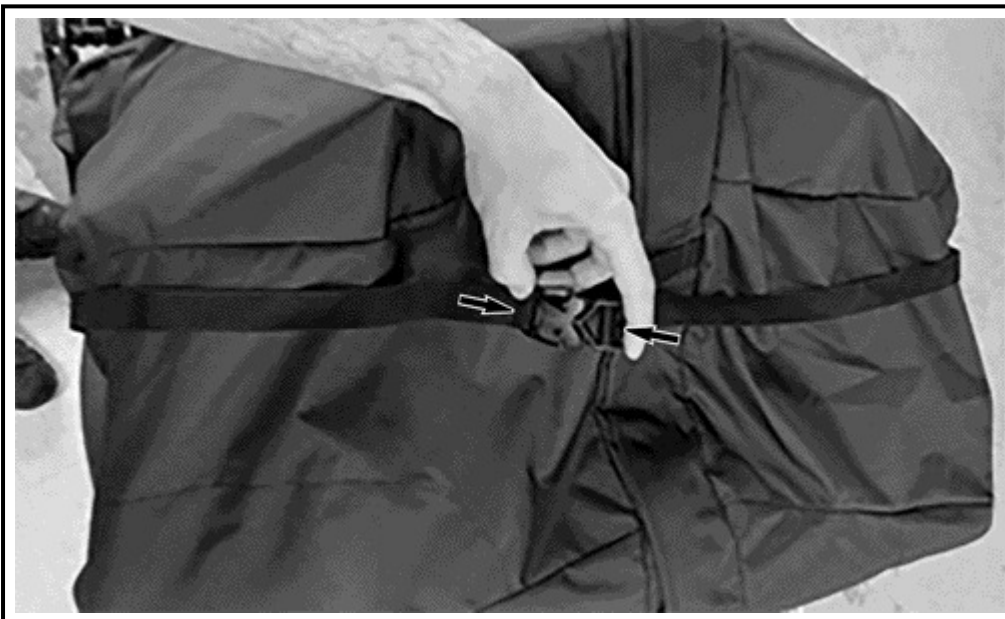


3. Stretch the top of the cover by tightening the strap.

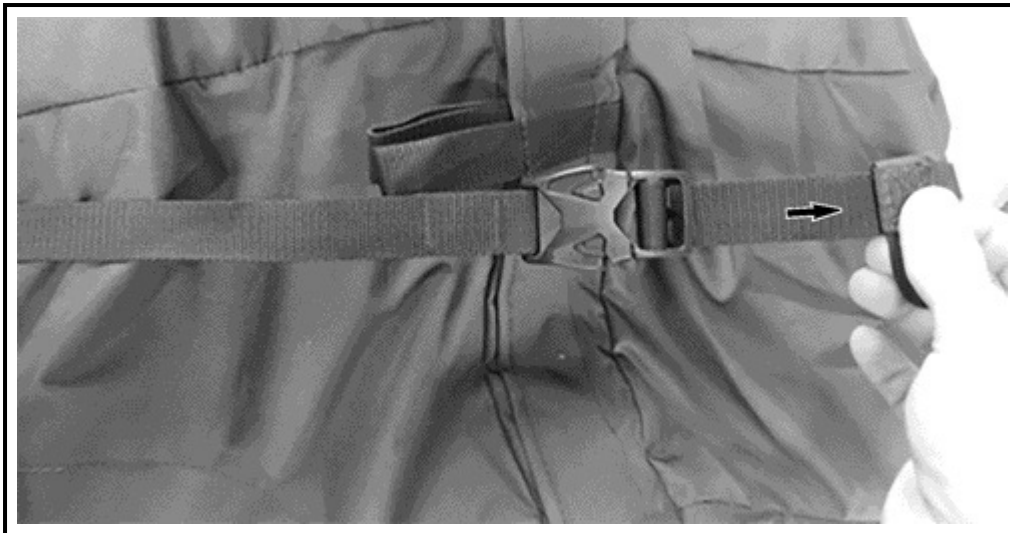

"X" System Cover

1. Install the cover over the handlebars and onto the hood.
2. From the front of the sled, slip the cover down over the front bumper.
3. At the rear of the sled, pull the cover down over seat, backrest and passenger's handles.
4. Cross straps as shown on the picture.

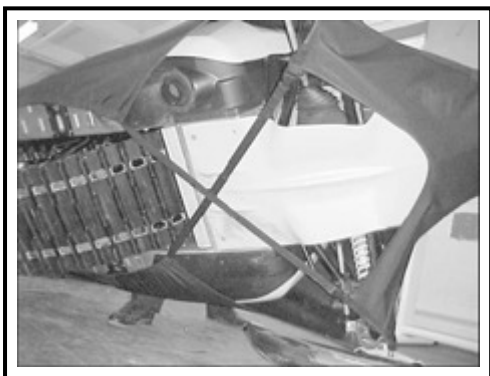

"X" SYSTEM

5. Attach back buckle and bind evenly on both sides.
6. If the cover includes a middle strap, thread through the suspension, attach to the other side and bind securely on both sides.

NOTE: Some covers are equipped with belt and buckles top cover tie system, for a tighter cover fit on snowmobile.



BELT AND BUCKLES TIE SYSTEM

NOTICE Make sure gas cap zippered access is closed and top cover belt (if equipped) is correctly adjusted before trailering.

Rear Strap

Some covers may be also equipped with a rear adjustment strap for a tight fit on snowmobile.

Attach the strap at the rear of the footpeg.

Pull on the strap firmly to tight the cover.



Step 1: Hook the strap to the end of the footpeg

Step 2: Pull the strap towards the front to tight the cover