



SSV KIT - Front Mudguard Kit - Defender G2 (Excluding European Union and United Kingdom) - Traxter G2

Instruction Sheet

Can-Am Off-Road

February 9, 2026
Version A

487804300

Time for Completion: 0.25 hour

Front Mudguard Kit - Defender G2 (Excluding European Union and United Kingdom) - Traxter G2

The following symbols may be used in this document:

DANGER
Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

WARNING
Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

CAUTION
Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE
Indicates an instruction which, if not followed, could severely damage vehicle components or other property.

WARNING

- This kit is designed for specific applicable models only (authorized BRP dealers will confirm model(s)). It is not recommended for units other than the one (those) for which it was sold.
- If the installation of the kit requires a template, ensure template is to scale.
- Should removal of a locking device (e.g. lock tabs, self-locking fasteners, etc.) be required when undergoing disassembly/ assembly, always replace with a new one.
- Torque wrench tightening specifications must strictly be adhered to.
- Always wear EYE PROTECTION AND APPROPRIATE GLOVES when using power tools.
- Always be aware of parts that can move, such as wheels, transmission components, etc.
- Some components may be HOT. Always wait for all components to cool down before performing work.
- Unless otherwise specified, engine must be OFF when performing any operation on the vehicle.

WARNING

Some important safety information and/or operating instructions dedicated to the end user might be included in this instruction sheet. Make sure to give the kit part number as well as the instruction sheet included with this kit to the customer. Verify that the customer has access to all the information required for proper use of the accessory.

NOTE

USE TIGHTENING TORQUES IN THE FOLLOWING TABLE IF NOT OTHERWISE SPECIFIED.

–	GRADE			
–	5.8	8.8	10.9	12.9

M4	1.8 N•m ± 0.2 N•m	2.8 N•m ± 0.2 N•m	3.8 N•m ± 0.2 N•m	4.5 N•m ± 0.5 N•m
	(16 lbf•in ± 2 lbf•in)	(25 lbf•in ± 2 lbf•in)	(34 lbf•in ± 2 lbf•in)	(40 lbf•in ± 4 lbf•in)
M5	3.3 N•m ± 0.2 N•m	5 N•m ± 0.5 N•m	7.8 N•m ± 0.7 N•m	9 N•m ± 1 N•m
	(29 lbf•in ± 2 lbf•in)	(44 lbf•in ± 4 lbf•in)	(69 lbf•in ± 6 lbf•in)	(80 lbf•in ± 9 lbf•in)
M6	7.5 N•m ± 1 N•m	10 N•m ± 2 N•m	12.8 N•m ± 2.2 N•m	16 N•m ± 2 N•m
	(66 lbf•in ± 9 lbf•in)	(89 lbf•in ± 18 lbf•in)	(113 lbf•in ± 19 lbf•in)	(142 lbf•in ± 18 lbf•in)
M8	15.3 N•m ± 1.7 N•m	24.5 N•m ± 3.5 N•m	31.5 N•m ± 3.5 N•m	40 N•m ± 5 N•m
	(135 lbf•in ± 15 lbf•in)	(18 lbf•ft ± 3 lbf•ft)	(23 lbf•ft ± 3 lbf•ft)	(30 lbf•ft ± 4 lbf•ft)
M10	29 N•m ± 3 N•m	48 N•m ± 6 N•m	61 N•m ± 9 N•m	73 N•m ± 7 N•m
	(21 lbf•ft ± 2 lbf•ft)	(35 lbf•ft ± 4 lbf•ft)	(45 lbf•ft ± 7 lbf•ft)	(54 lbf•ft ± 5 lbf•ft)
M12	52 N•m ± 6 N•m	85 N•m ± 10 N•m	105 N•m ± 15 N•m	128 N•m ± 17 N•m
	(38 lbf•ft ± 4 lbf•ft)	(63 lbf•ft ± 7 lbf•ft)	(77 lbf•ft ± 11 lbf•ft)	(94 lbf•ft ± 13 lbf•ft)
M14	85 N•m ± 10 N•m	135 N•m ± 15 N•m	170 N•m ± 20 N•m	200 N•m ± 25 N•m
	(63 lbf•ft ± 7 lbf•ft)	(100 lbf•ft ± 11 lbf•ft)	(125 lbf•ft ± 15 lbf•ft)	(148 lbf•ft ± 18 lbf•ft)
M16	126 N•m ± 14 N•m	205 N•m ± 25 N•m	255 N•m ± 30 N•m	305 N•m ± 35 N•m
	(93 lbf•ft ± 10 lbf•ft)	(151 lbf•ft ± 18 lbf•ft)	(188 lbf•ft ± 22 lbf•ft)	(225 lbf•ft ± 26 lbf•ft)
M18	170 N•m ± 20 N•m	273 N•m ± 32 N•m	330 N•m ± 25 N•m	413 N•m ± 47 N•m
	(125 lbf•ft ± 15 lbf•ft)	(201 lbf•ft ± 24 lbf•ft)	(243 lbf•ft ± 18 lbf•ft)	(305 lbf•ft ± 35 lbf•ft)



NOTE

The illustrations in this document show typical construction of the different assemblies and may not reproduce the full detail or exact shape of the parts; however, they represent parts that have the same or similar function. In the pictures below, parts may have been removed for clarity purposes.

ICON LEGEND


ICON



REQUIRED TOOLS

REQUIRED TOOL			USE
T1	8 mm (5/16 in) Drill Bit		To drill holes in optional fender flares.

PARTS TO BE INSTALLED

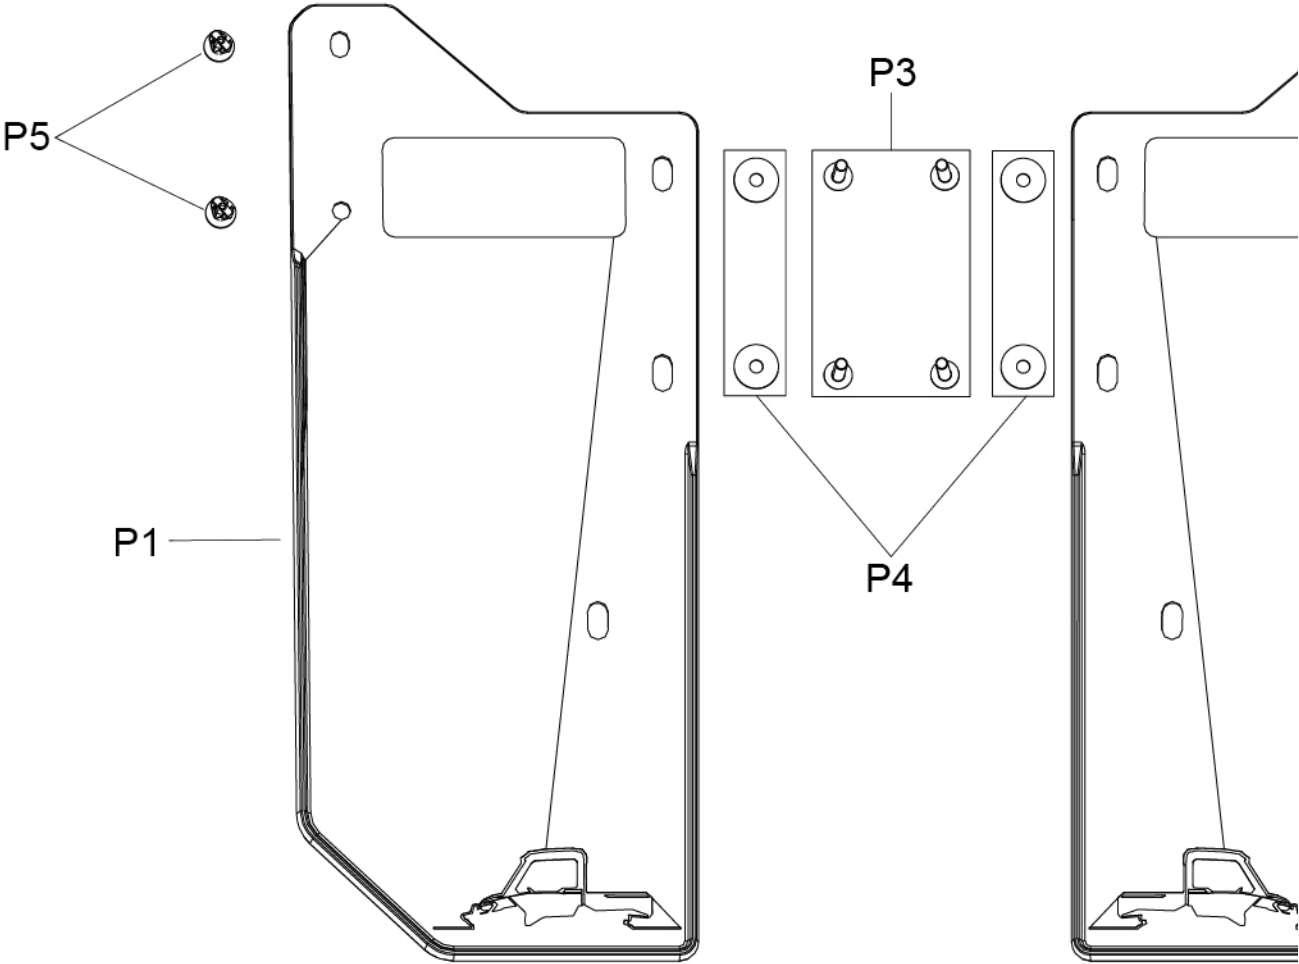

ITEM	DESCRIPTION	PART NUMBER	QTY
P1	LH Front Mudguard	Not Available Separately	1
P2	RH Front Mudguard	Not Available Separately	1
P3	M6 X 30 Torx Screw	250000842	4
P4	M6 Flat Washer	250200162	4
P5	M8 Plastic Rivet	293150230	4

In this document only the front LH side shown. Repeat for RH side if needed.

In many of the illustrations in this document, parts have been removed for clarity.




NOTE

This present kit is **NOT COMPATIBLE** with any of the *APACHE TRACK KITS*.


VEHICLE PREPARATION

Traxter XU and Traxter X MR Models (WITHOUT Accessory Fender Flares Kit)

- 1. Remove and discard the M6 Torx screws, M6 flat washers and the M8 black darts.

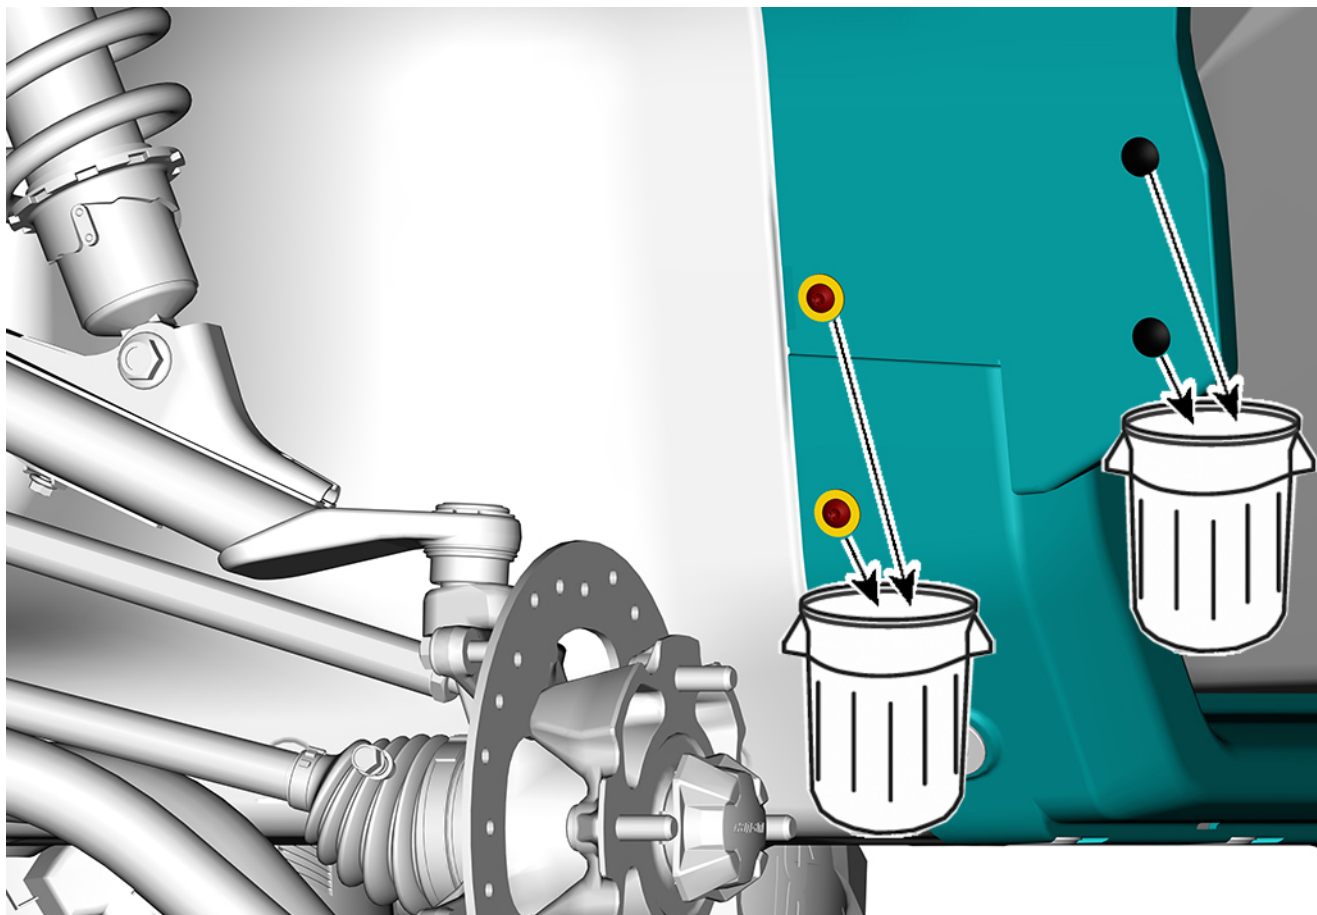**Traxter XU and Traxter X MR Models (WITH Accessory Fender Flares Kit)**


1. Remove and discard the M6 Torx screws.

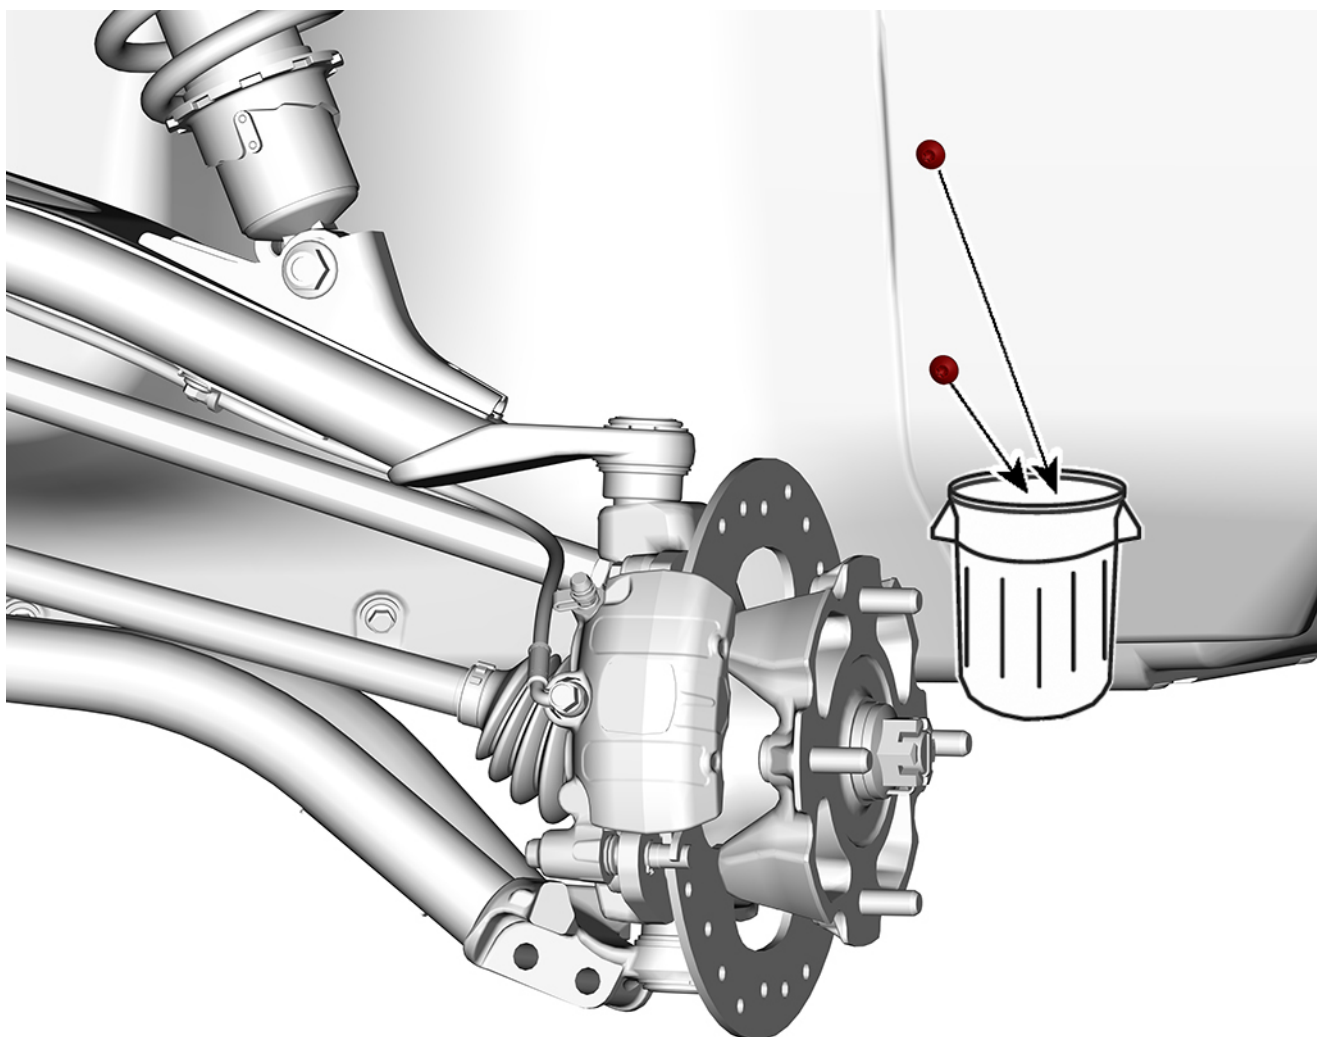


Defender Models (WITH Accessory Fender Flares Kit)**NOTE**

For Defender Models (if not already installed) the *FENDER FLARES KIT* installation must be done prior to installing this kit. Refer to the appropriate *PARTS, ACCESSORIES AND APPAREL CATALOG* for part numbers and details.

1. Remove and discard the M6 Torx screws.

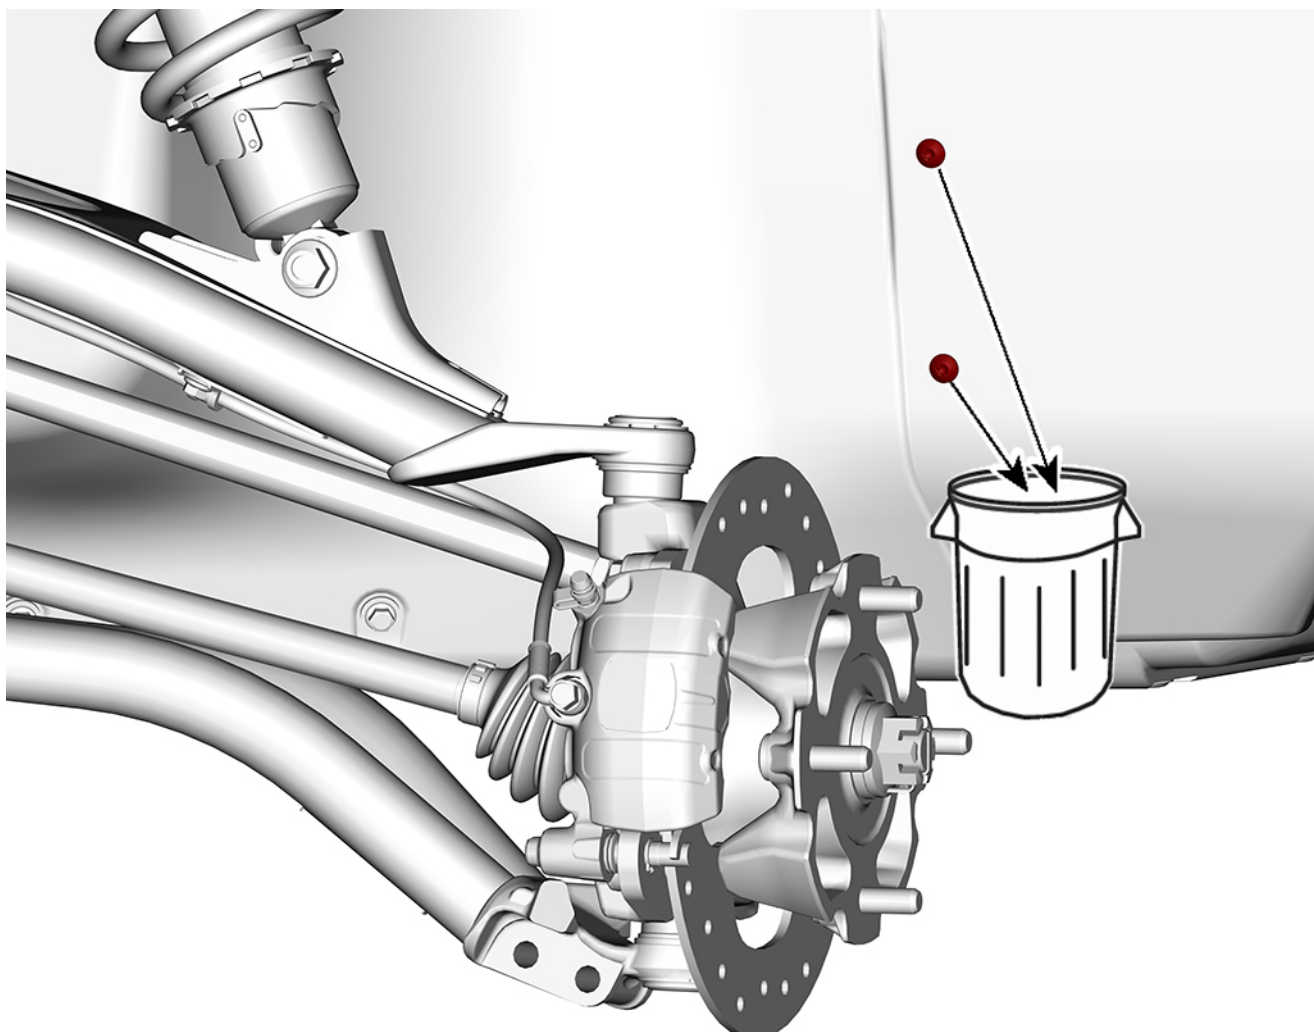**INSTALLATION INSTRUCTIONS****Traxter XU and Traxter X MR Models (WITHOUT Accessory Fender Flares Kit)**

1. Install the LH mudguard [P1] on vehicle and secure using two (2) M6 X 30 Torx screws [P3], two (2) M6 flat washers [P4] and two (2) M8 plastic rivets [P5]. Tighten to specification.

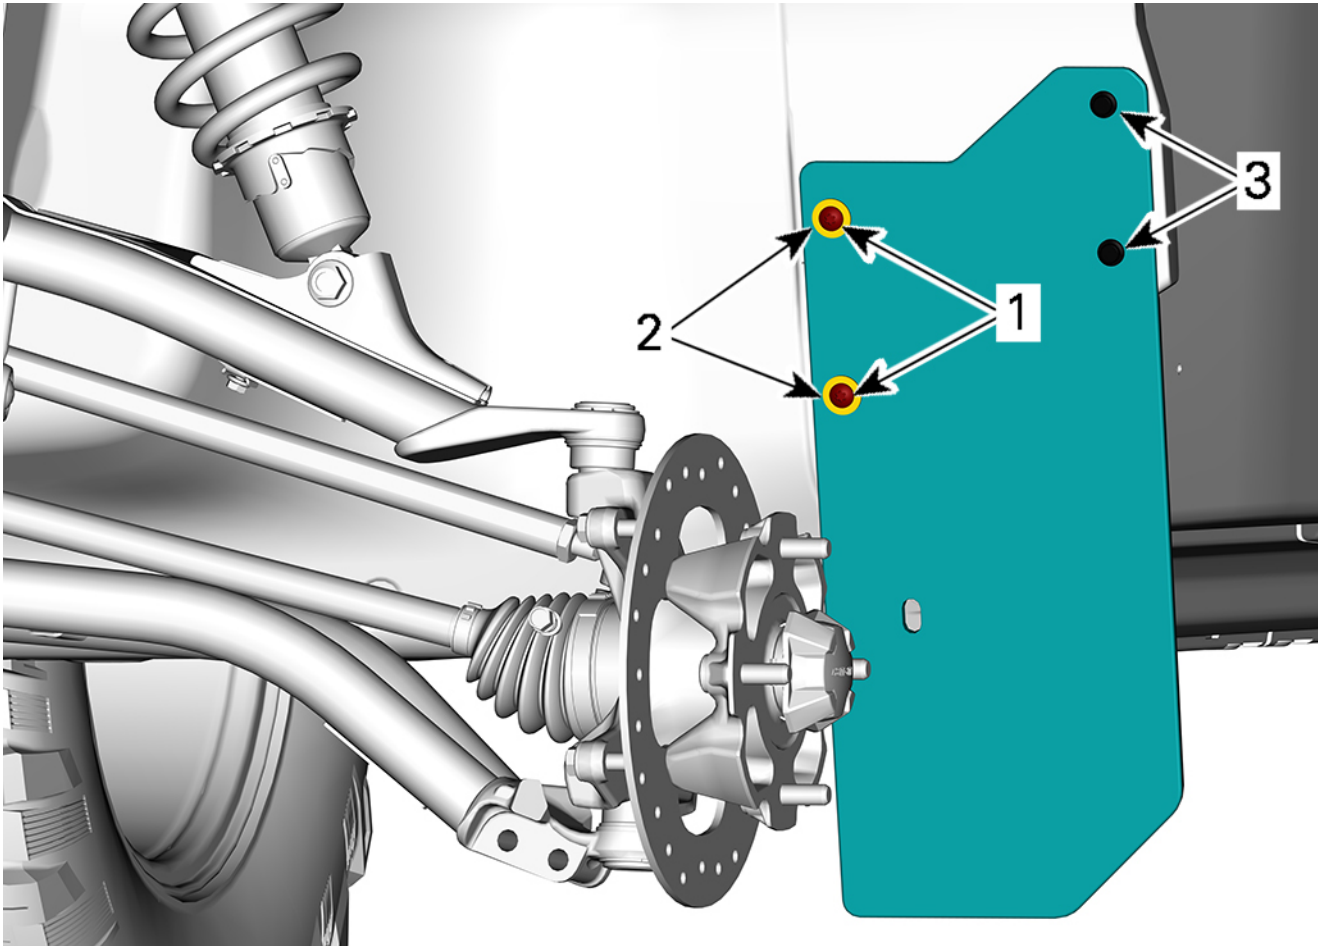

- 1. M6 X 30 Torx Screws [P3]
- 2. M6 Flat Washers [P4]
- 3. M8 Plastic Rivets [P5]

TIGHTENING TORQUE	
M6 X 30 Torx Screw [P3]	9 ± 1 Nm (80 ± 9 lbf•in)


Traxter XU and Traxter X MR Models (WITH Accessory Fender Flares Kit)



NOTE

For the Traxter XU and Traxter X MR Models (WITH Accessory Fender Flare Kit) you will need four (4) black darts (P/N 293730010) not included in kit.

- 1. Install the LH mudguard [P1] on vehicle and secure using two (2) M6 X 30 Torx screws [P3], two (2) M6 flat washers [P4]. Tighten to specification.

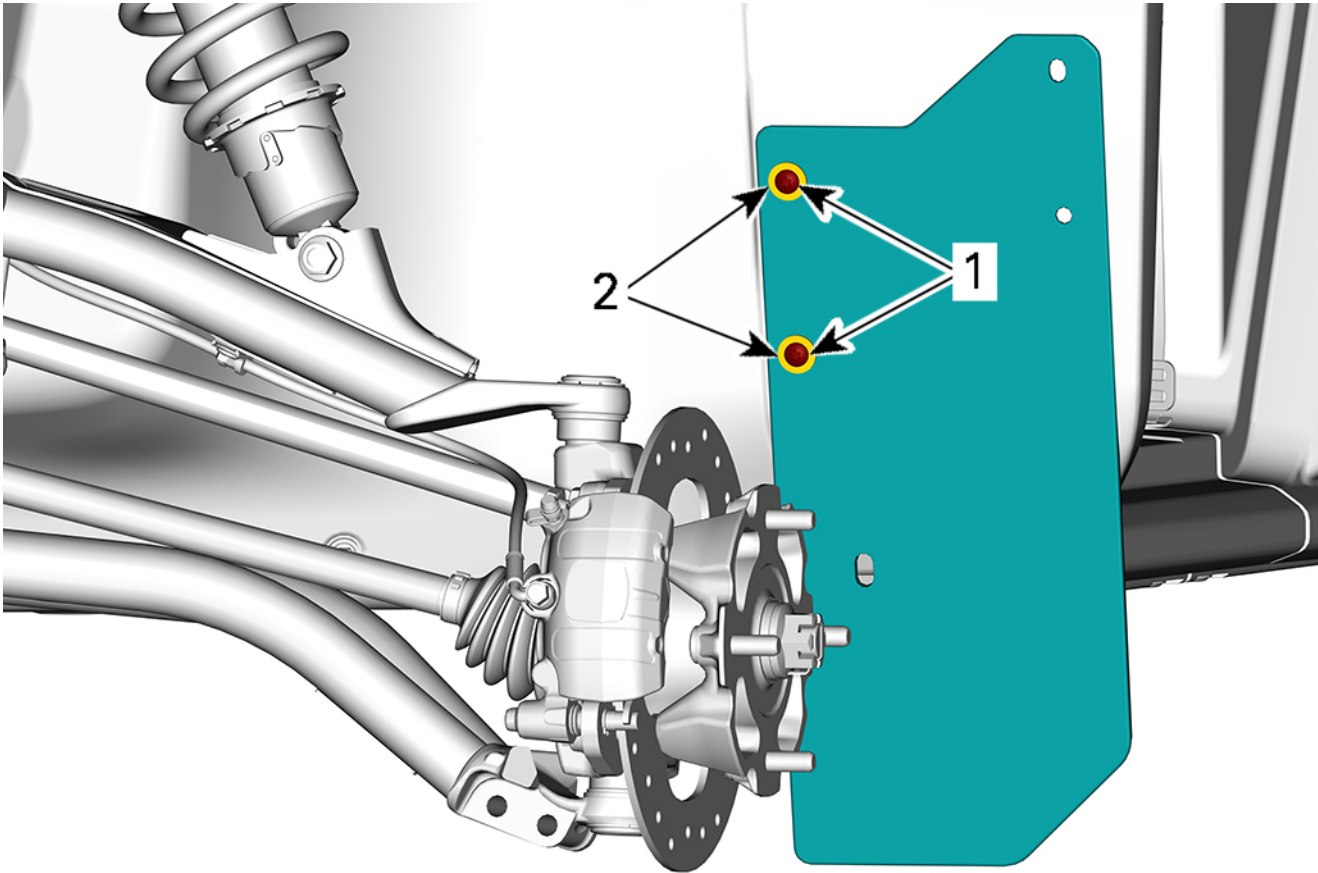

- 1. M6 X 30 Torx Screws [P3]
- 2. M6 Flat Washers [P4]


TIGHTENING TORQUE	
M6 X 30 Torx Screw [P3]	9 ± 1 Nm (80 ± 9 lbf•in)

2. Using the installed LH mudguard [P1] as a Template and using the [T1] 8mm (5/16 in) drill bit, drill two (2) holes in the designated area as shown below.




NOTE

Only the first layer of the fender flare has to be drilled. Be careful not to drill deeper than 6 mm (1/4 in).

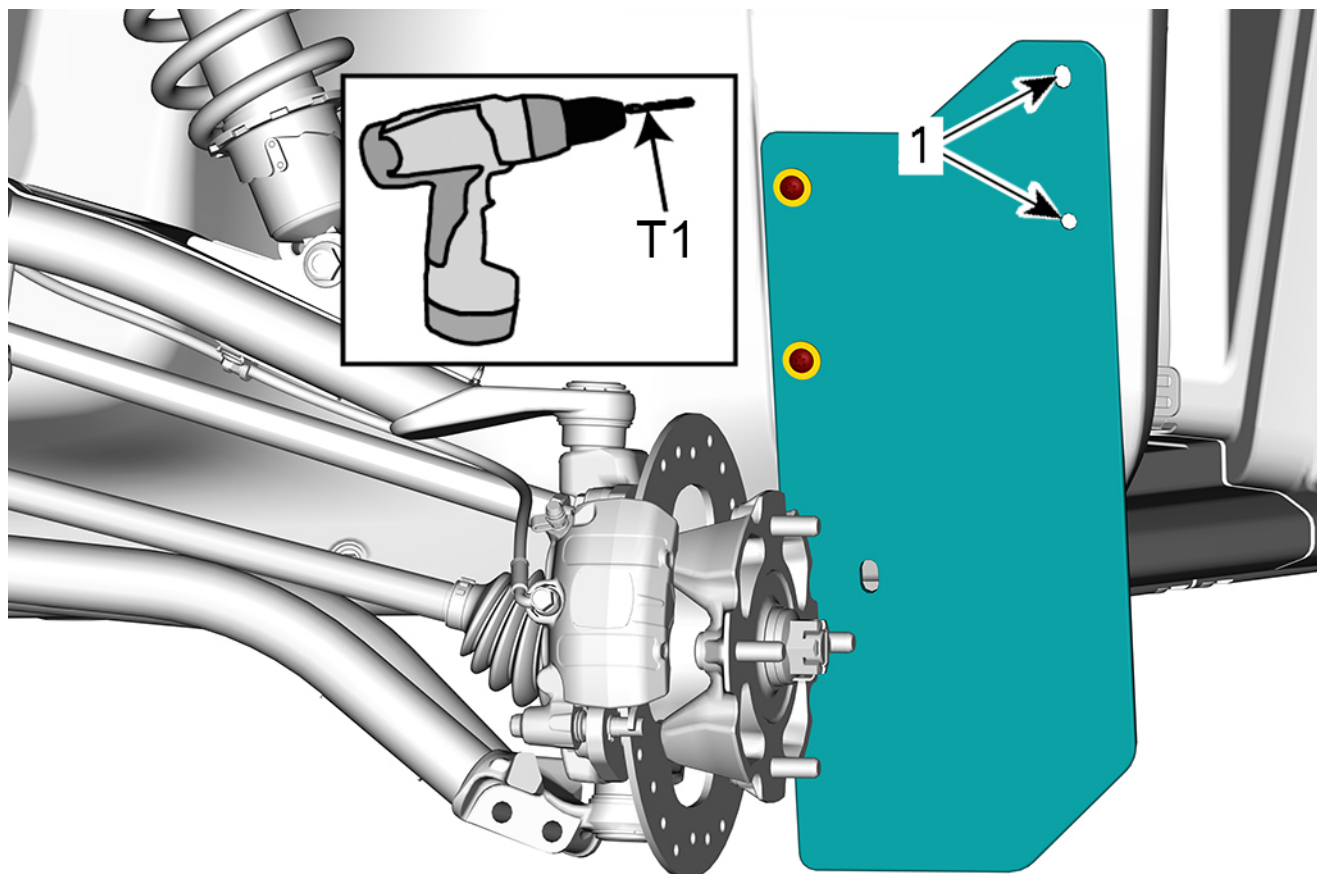


1. Holes to drill

3. Finish securing the LH mudguard using two (2) M8 black darts (P/N 293730010) not included in kit.

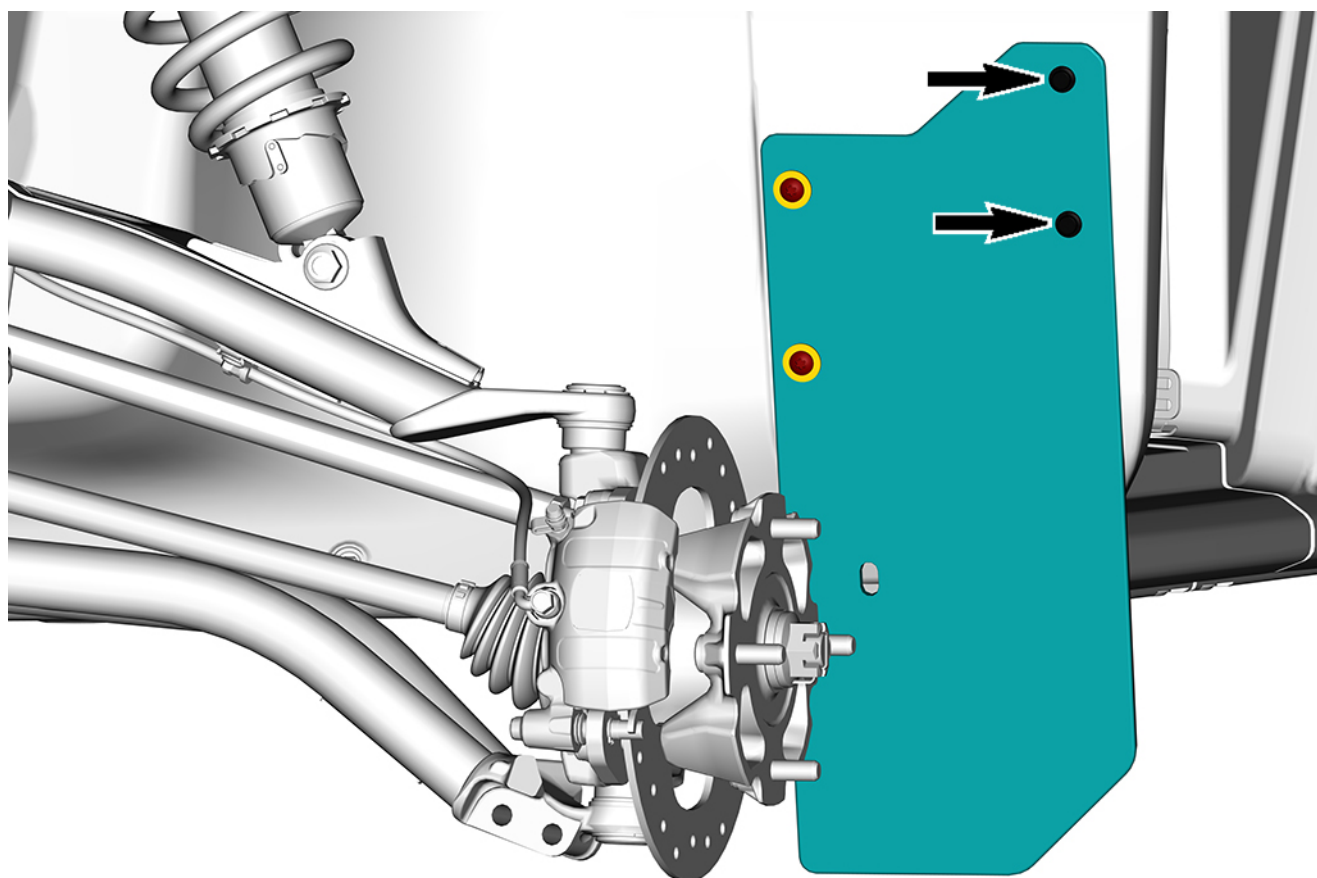

Defender Models (WITH Accessory Fender Flares Kit)

1. Install the LH mudguard [P1] on LH fender flare and secure using two (2) M6 X 30 Torx screws [P3], two (2) M6 flat washers [P4]. Tighten to specification.

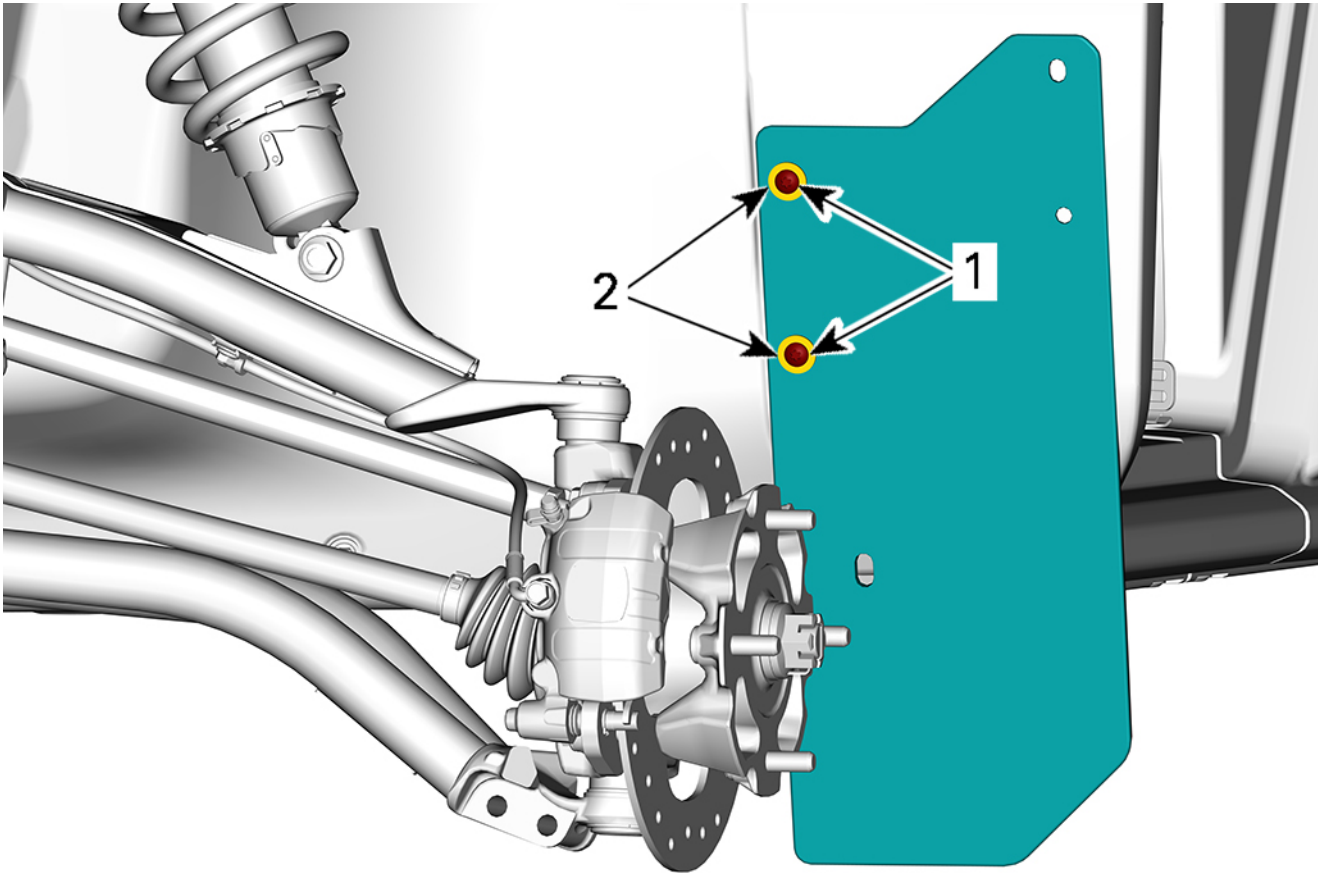

- 1. M6 X 30 Torx Screws [P3]
- 2. M6 Flat Washers [P4]


TIGHTENING TORQUE	
M6 X 30 Torx Screw [P3]	9 ± 1 Nm (80 ± 9 lbf•in)

2. Using the installed LH mudguard [P1] as a Template and using the [T1] 8mm (5/16 in) drill bit, drill two (2) holes in the designated area as shown below.



NOTE

Only the first layer of the fender flare has to be drilled. Be careful not to drill deeper than 6 mm (1/4 in).

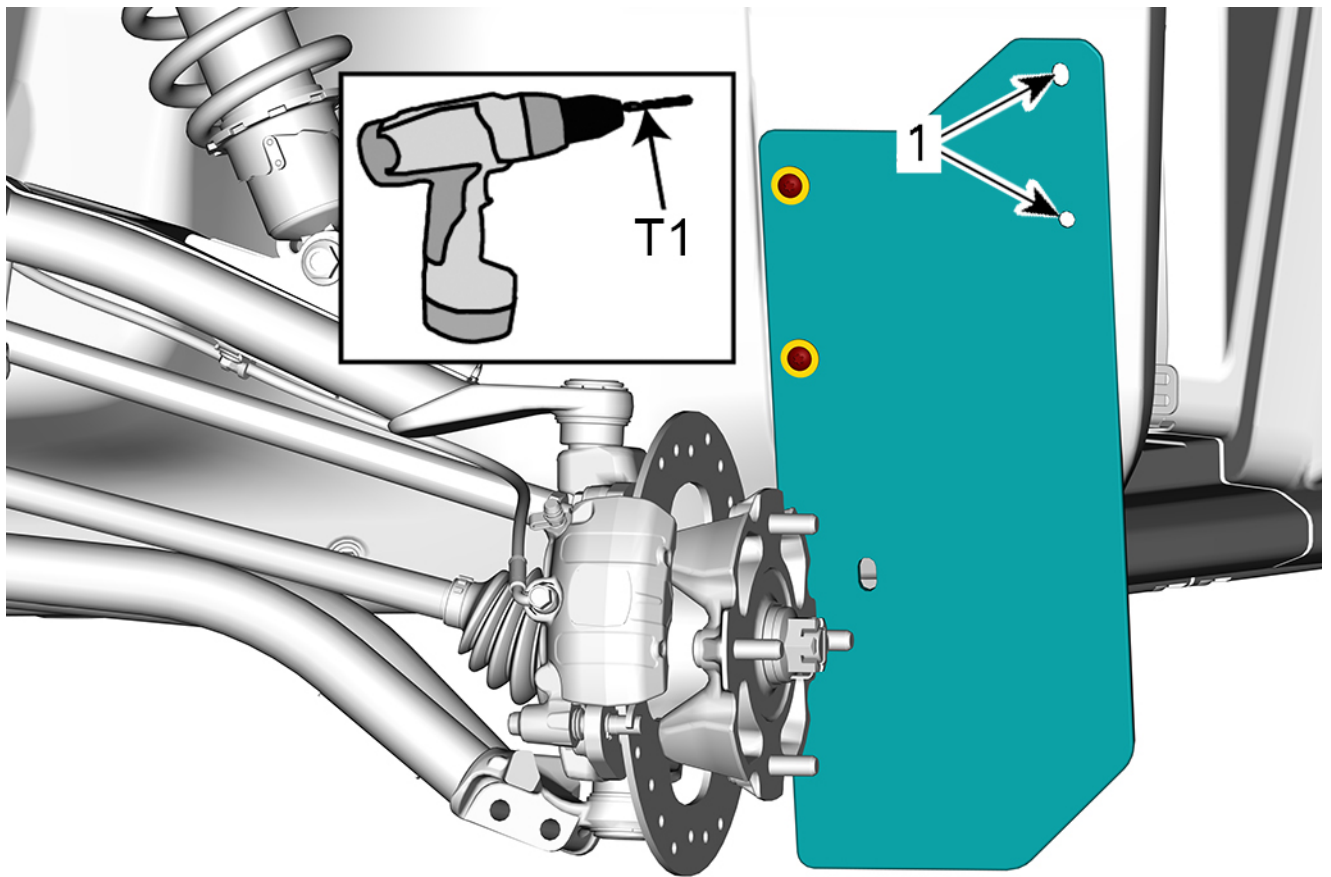

1. Holes to drill

3. Finish securing the LH mudguard using two (2) M8 plastic rivets [P5].

