



INSTRUCTION SHEET

Can-Am Off-road

AUGUST 17, 2026
487804533 | VERSION A

Cargo Bed Plate for Sliding LinQ

TIME FOR COMPLETION: 1.0 HOUR

The following symbols may be used in this document:

DANGER

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

WARNING

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

CAUTION

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE

Indicates an instruction which, if not followed, could severely damage vehicle components or other property.

**! WARNING**

- This kit is designed for specific applicable models only (authorized BRP dealers will confirm model(s)). It is not recommended for units other than the one (those) for which it was sold.
- If the installation of the kit requires a template, ensure template is to scale.
- Should removal of a locking device (e.g. lock tabs, self-locking fasteners, etc.) be required when undergoing disassembly/assembly, always replace with a new one.
- Torque wrench tightening specifications must strictly be adhered to.
- Always wear EYE PROTECTION AND APPROPRIATE GLOVES when using power tools.
- Always be aware of parts that can move, such as wheels, transmission components, etc.
- Some components may be HOT. Always wait for all components to cool down before performing work.
- Unless otherwise specified, engine must be OFF when performing any operation on the vehicle.

! WARNING

Some important safety information and/or operating instructions dedicated to the end user might be included in this instruction sheet. Make sure to give the kit part number as well as the instruction sheet included with this kit to the customer. Verify that the customer has access to all the information required for proper use of the accessory.

✎ NOTE

USE TIGHTENING TORQUES IN THE FOLLOWING TABLE IF NOT OTHERWISE SPECIFIED.

–	GRADE			
–	5.8	8.8	10.9	12.9
M4	1.8 N•m ± 0.2 N•m	2.8 N•m ± 0.2 N•m	3.8 N•m ± 0.2 N•m	4.5 N•m ± 0.5 N•m
	(16 lbf•in ± 2 lbf•in)	(25 lbf•in ± 2 lbf•in)	(34 lbf•in ± 2 lbf•in)	(40 lbf•in ± 4 lbf•in)
M5	3.3 N•m ± 0.2 N•m	5 N•m ± 0.5 N•m	7.8 N•m ± 0.7 N•m	9 N•m ± 1 N•m
	(29 lbf•in ± 2 lbf•in)	(44 lbf•in ± 4 lbf•in)	(69 lbf•in ± 6 lbf•in)	(80 lbf•in ± 9 lbf•in)
M6	7.5 N•m ± 1 N•m	10 N•m ± 2 N•m	12.8 N•m ± 2.2 N•m	16 N•m ± 2 N•m
	(66 lbf•in ± 9 lbf•in)	(89 lbf•in ± 18 lbf•in)	(113 lbf•in ± 19 lbf•in)	(142 lbf•in ± 18 lbf•in)
M8	15.3 N•m ± 1.7 N•m	24.5 N•m ± 3.5 N•m	31.5 N•m ± 3.5 N•m	40 N•m ± 5 N•m
	(135 lbf•in ± 15 lbf•in)	(18 lbf•ft ± 3 lbf•ft)	(23 lbf•ft ± 3 lbf•ft)	(30 lbf•ft ± 4 lbf•ft)
M10	29 N•m ± 3 N•m	48 N•m ± 6 N•m	61 N•m ± 9 N•m	73 N•m ± 7 N•m



	(21 lbf•ft ± 2 lbf•ft)	(35 lbf•ft ± 4 lbf•ft)	(45 lbf•ft ± 7 lbf•ft)	(54 lbf•ft ± 5 lbf•ft)
M12	52 N•m ± 6 N•m	85 N•m ± 10 N•m	105 N•m ± 15 N•m	128 N•m ± 17 N•m
	(38 lbf•ft ± 4 lbf•ft)	(63 lbf•ft ± 7 lbf•ft)	(77 lbf•ft ± 11 lbf•ft)	(94 lbf•ft ± 13 lbf•ft)
M14	85 N•m ± 10 N•m	135 N•m ± 15 N•m	170 N•m ± 20 N•m	200 N•m ± 25 N•m
	(63 lbf•ft ± 7 lbf•ft)	(100 lbf•ft ± 11 lbf•ft)	(125 lbf•ft ± 15 lbf•ft)	(148 lbf•ft ± 18 lbf•ft)
M16	126 N•m ± 14 N•m	205 N•m ± 25 N•m	255 N•m ± 30 N•m	305 N•m ± 35 N•m
	(93 lbf•ft ± 10 lbf•ft)	(151 lbf•ft ± 18 lbf•ft)	(188 lbf•ft ± 22 lbf•ft)	(225 lbf•ft ± 26 lbf•ft)
M18	170 N•m ± 20 N•m	273 N•m ± 32 N•m	330 N•m ± 25 N•m	413 N•m ± 47 N•m
	(125 lbf•ft ± 15 lbf•ft)	(201 lbf•ft ± 24 lbf•ft)	(243 lbf•ft ± 18 lbf•ft)	(305 lbf•ft ± 35 lbf•ft)

NOTE

The illustrations in this document show typical construction of the different assemblies and may not reproduce the full detail or exact shape of the parts; however, they represent parts that have the same or similar function. In the pictures below, parts may have been removed for clarity purposes.

ICON LEGEND


ICON	INDICATES
	Parts to be discarded Recycle or dispose as per local regulations.
	Parts kept for re-installation

REQUIRED TOOLS

REQUIRED TOOL			USE
T1	6.5 mm (1/4 in) Drill bit		To drill holes in the cargo box




PARTS TO BE INSTALLED

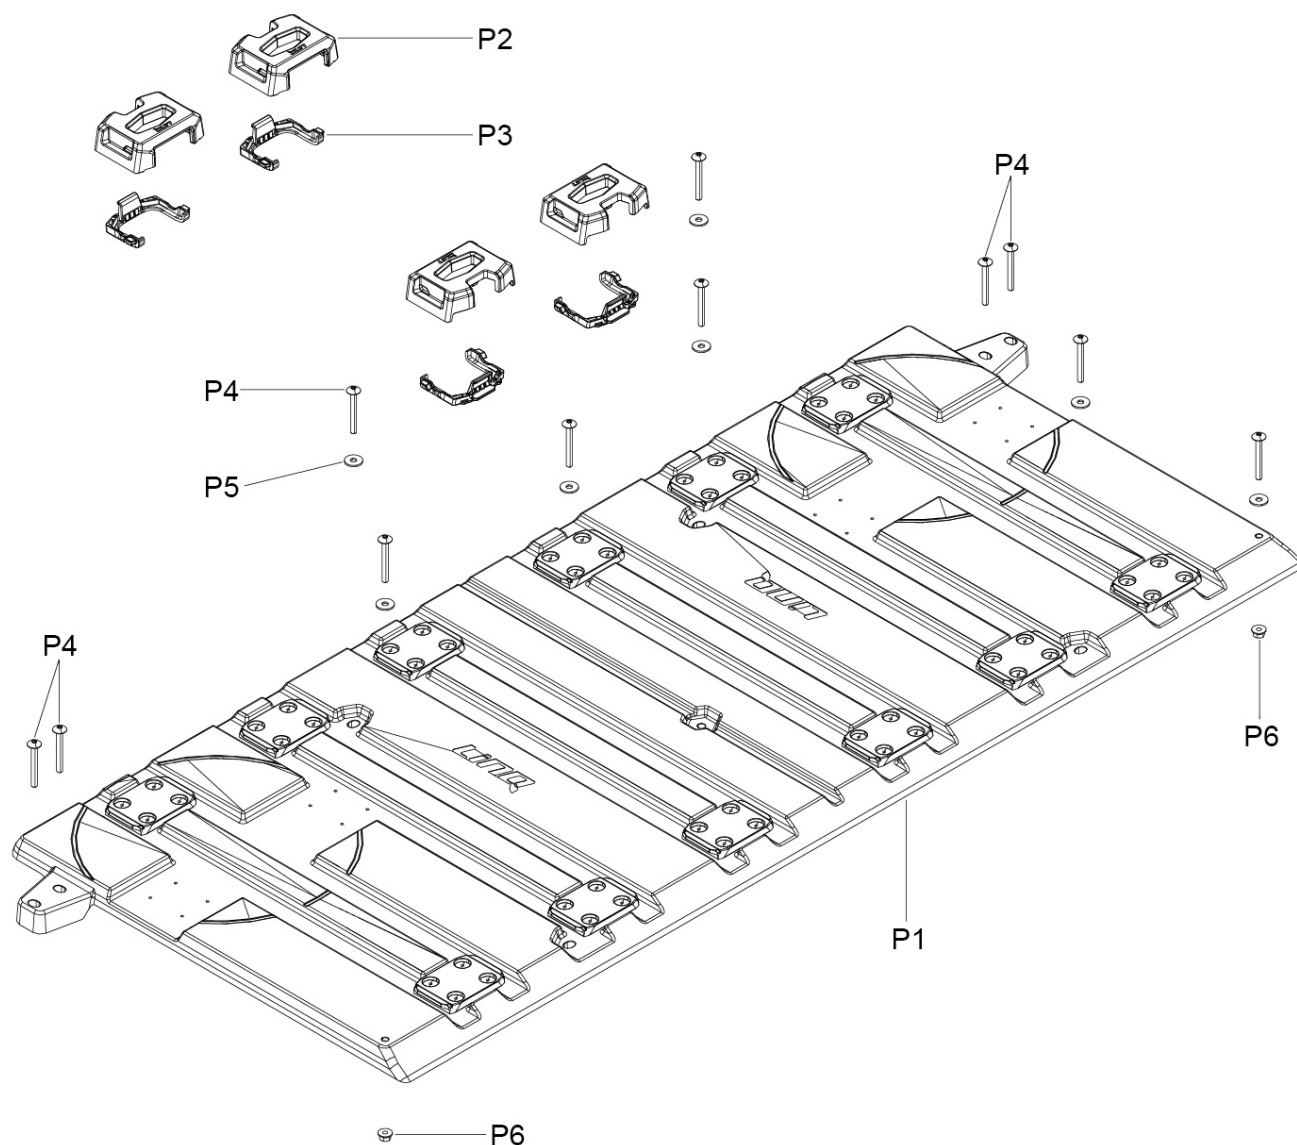


ITEM	DESCRIPTION	PART NUMBER	QTY
P1	Plate ass'y	Not available separately	1
P2	LinQ anchor	See service kit	4
P3	LinQ lever lock	See service kit	4
P4	M6 X 50 Torx screw	250000868	11
P5	M6 Flat washer	234062670	7
P6	M6 Flanged nut	233161464	2



SERVICE PARTS

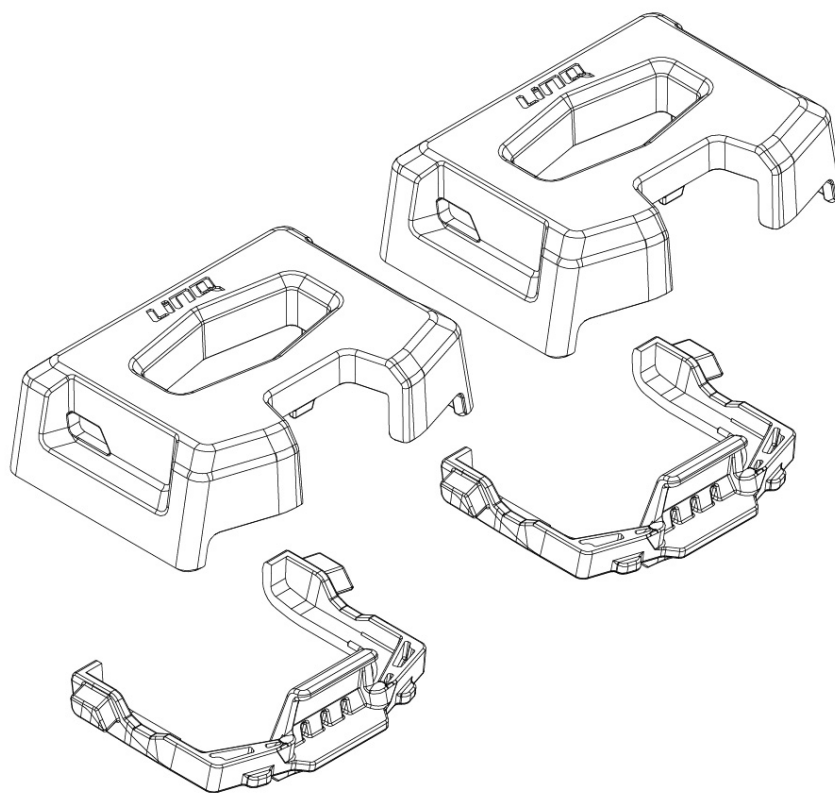

S1 - LINQ SLIDING BASE (P/N 715011726)

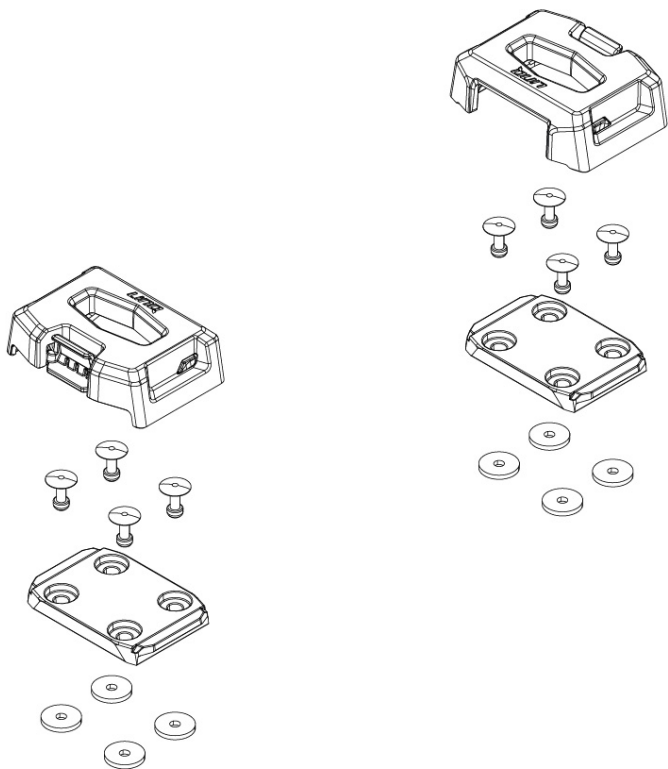

S2 - LINQ SLIDING BASE INSTALLATION KIT (P/N 715011784)


ITEM	DESCRIPTION	PART NUMBER	QTY
S1	LinQ Sliding Base	715011726	2
S2	LinQ Sliding Base Installation Kit	715011784	-

VEHICLE PREPARATION

NOTE

In most of the illustrations, only one side is shown. Repeat instructions on the opposite side if needed.


- 1. Open the cargo box.

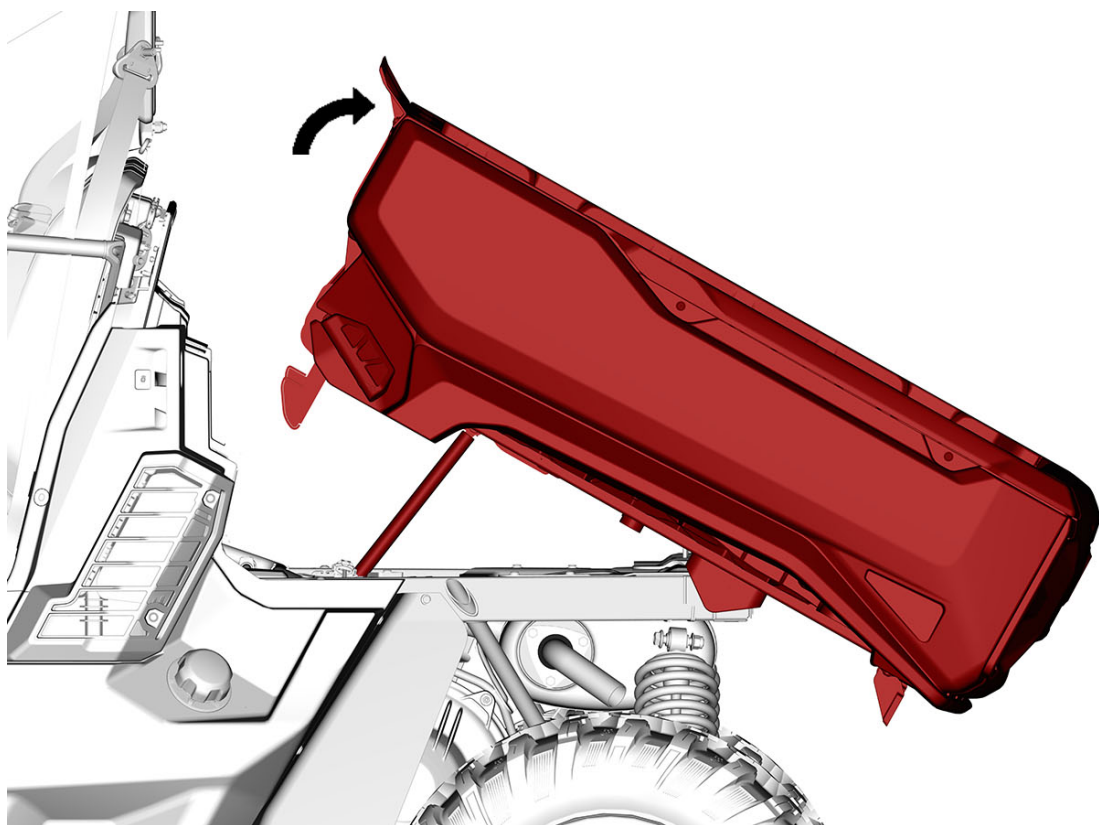

NOTE

In order to install this new accessory, you will need to remove and keep a few components.


2. Remove and discard four (4) screws.

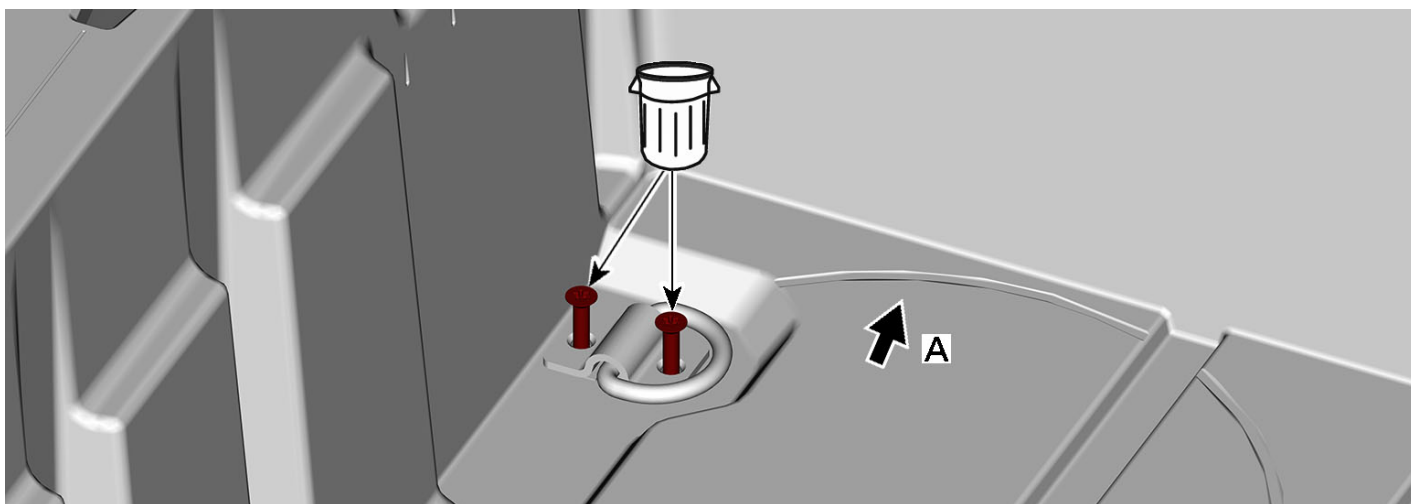

LH SIDE SHOWN


A. Front of the vehicle

3. Remove and keep the two (2) brackets, the two (2) D-rings and the two (2) back plates.

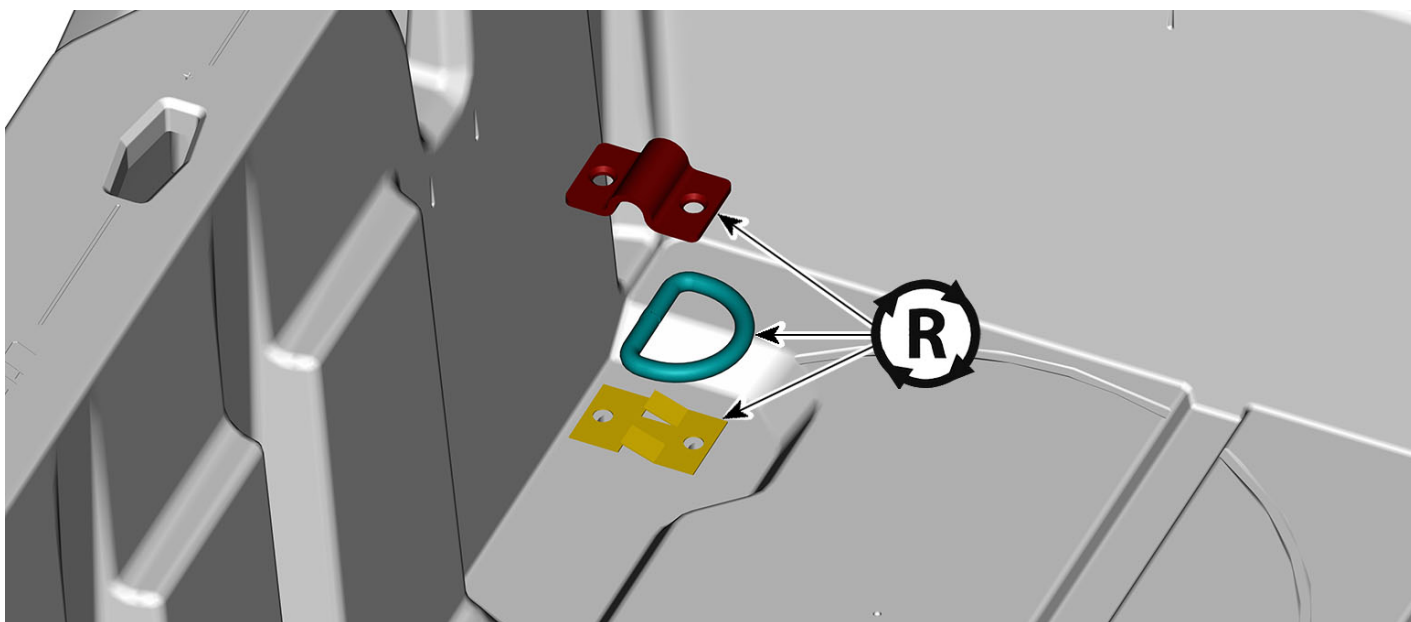

LH SIDE SHOWN


4. Remove and discard the five (5) screws shown below.

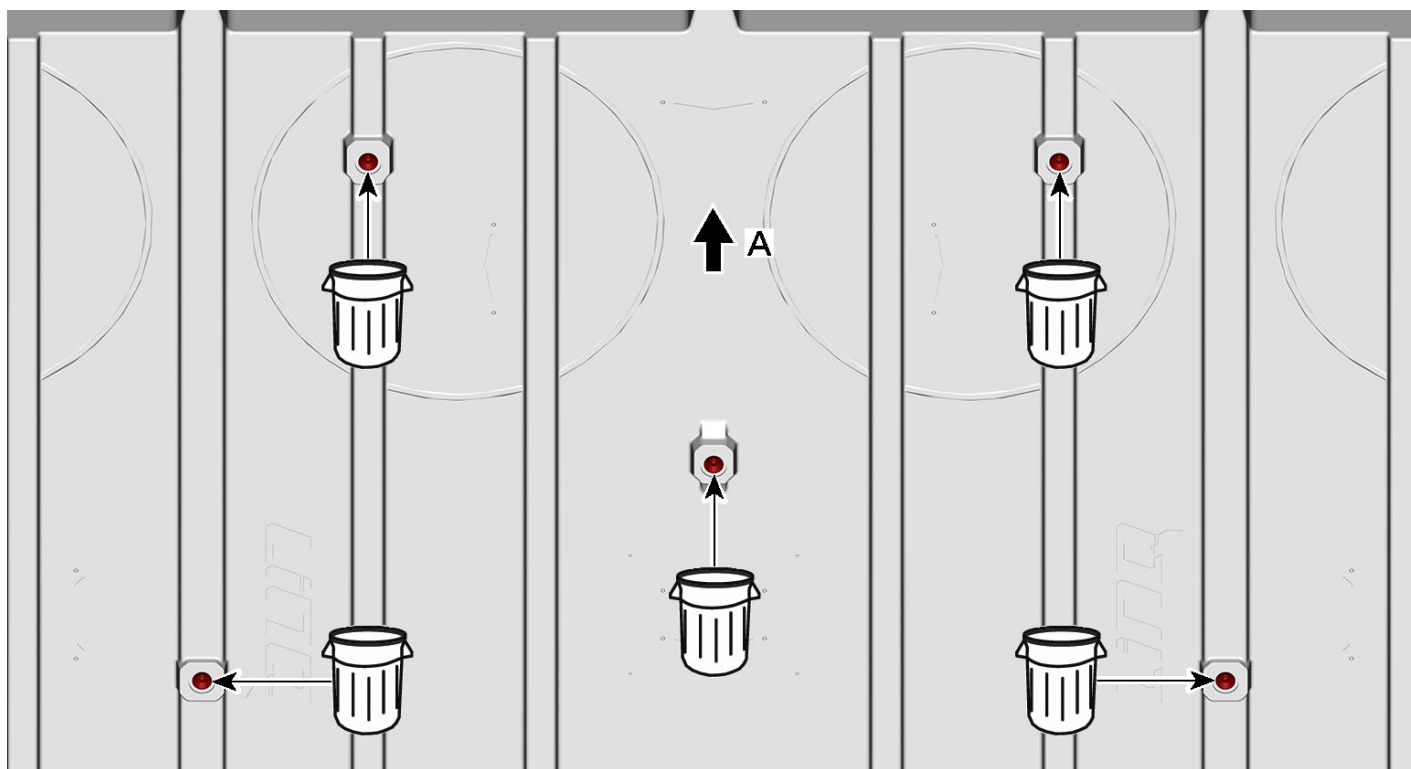


A. Front of the vehicle

INSTALLATION INSTRUCTIONS

1. Install plate ass'y [P1] at the bottom of the cargo box.

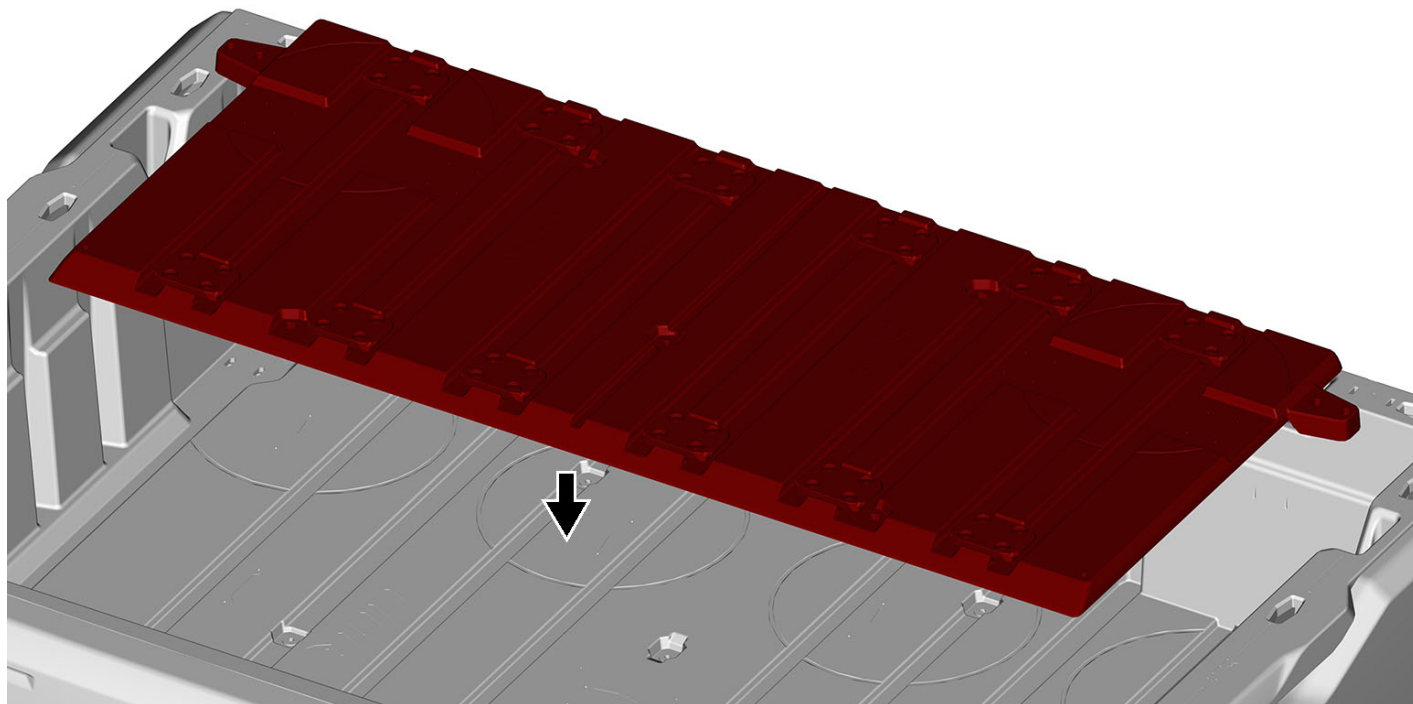


2. Secure the plate ass'y [P1] using five (5) M6 X 50 Torx screws [P4] and five M6 Flat washer [P5]. Do not tighten yet.

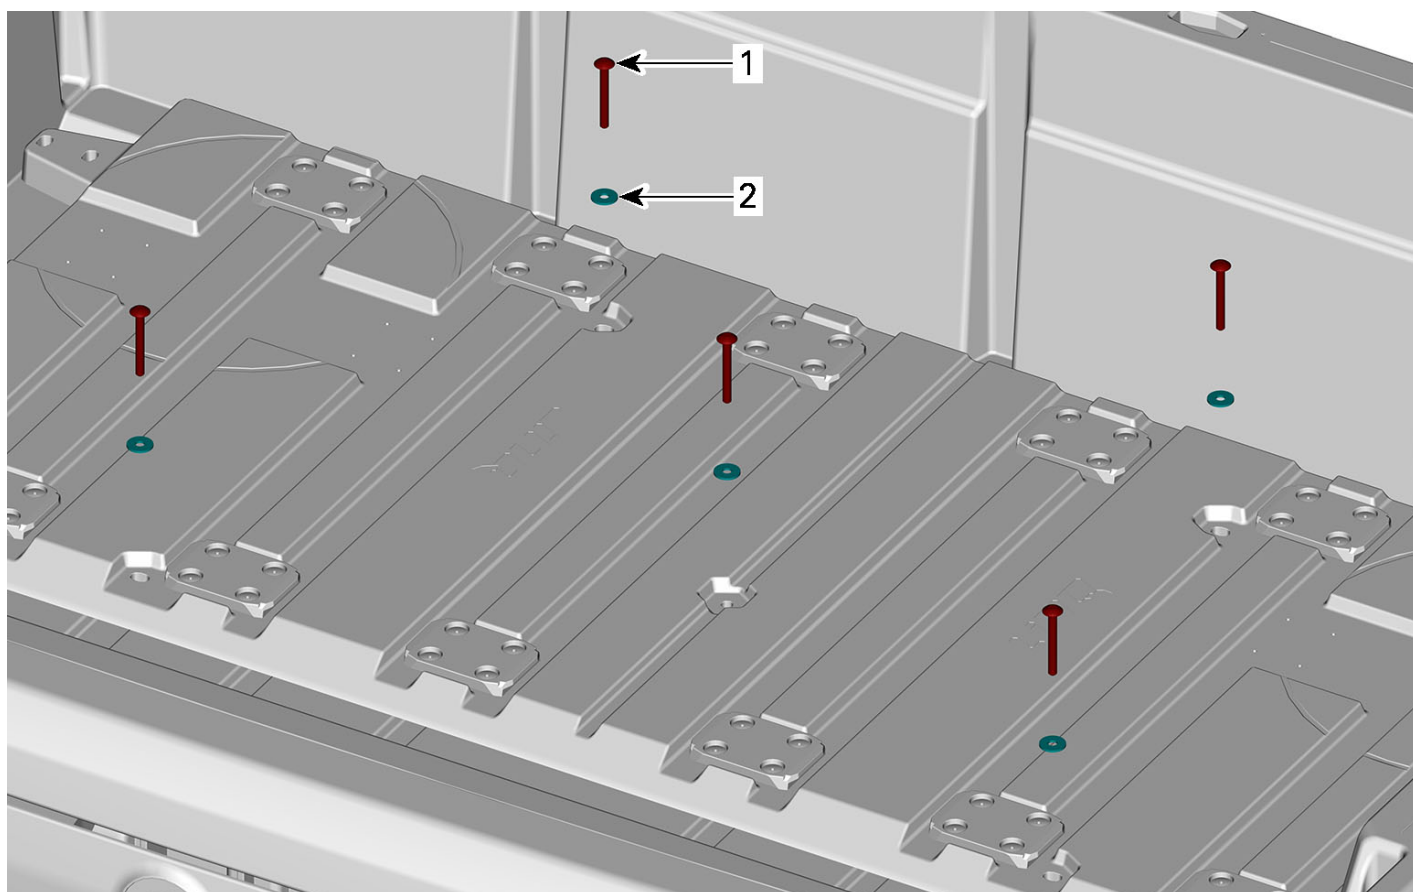

1. M6 X 50 Torx screw [P4]


2. M6 Flat washer [P5]

3. Install the brackets, the D-rings and the back plate on the plate ass'y [P1]. Secure using four (4) M6 X 50 Torx screws [P4].

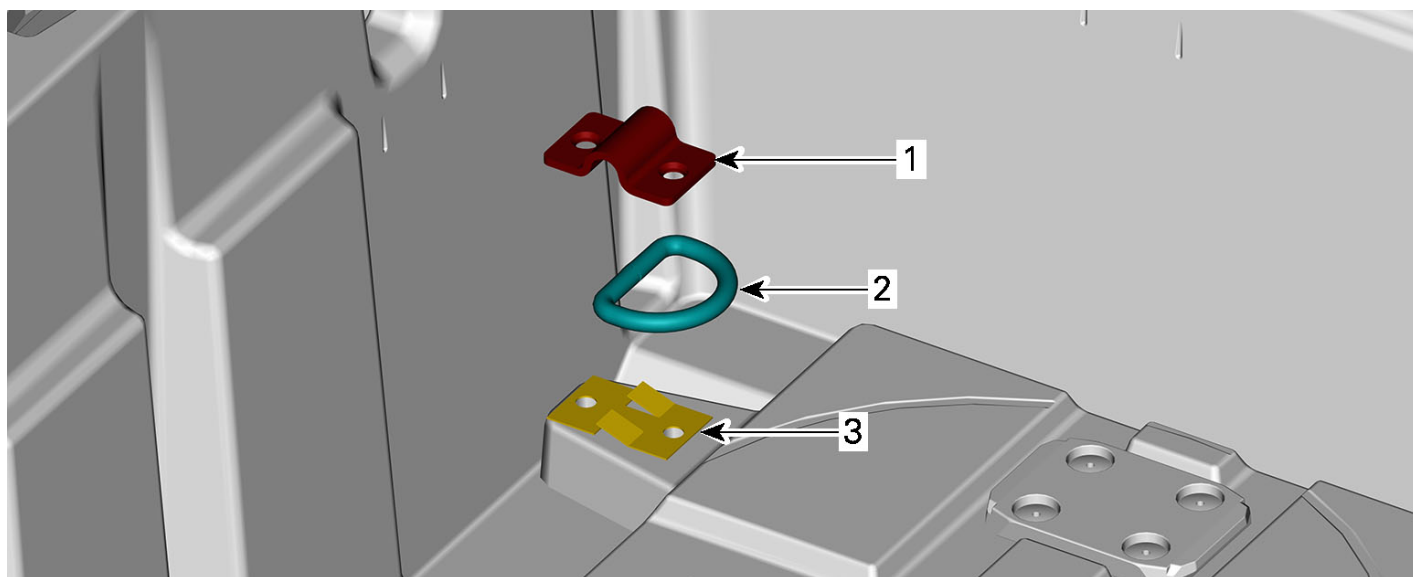

LH SIDE SHOWN

1. Bracket
2. D-ring
3. Back plate

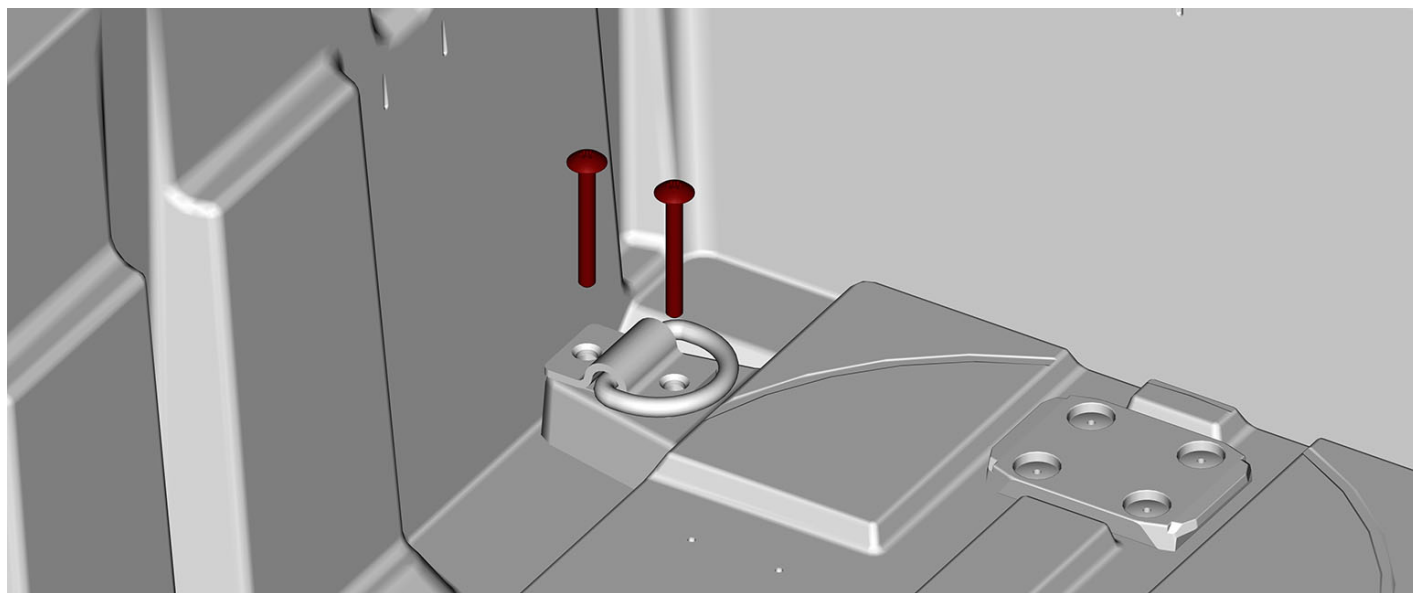


LH SIDE SHOWN

4. Tighten the M6 X 50 Torx screws [P4] to specification.


TIGHTENING TORQUE	
M6 X 50 Torx screw [P4]	4.5 ± 0.5 N•m (40 ± 4 lbf•in)

5. Use the holes in the plate ass'y [P1] as a jig to drill holes in the cargo box with the 6.5 mm (1/4 in) drill bit [T1].

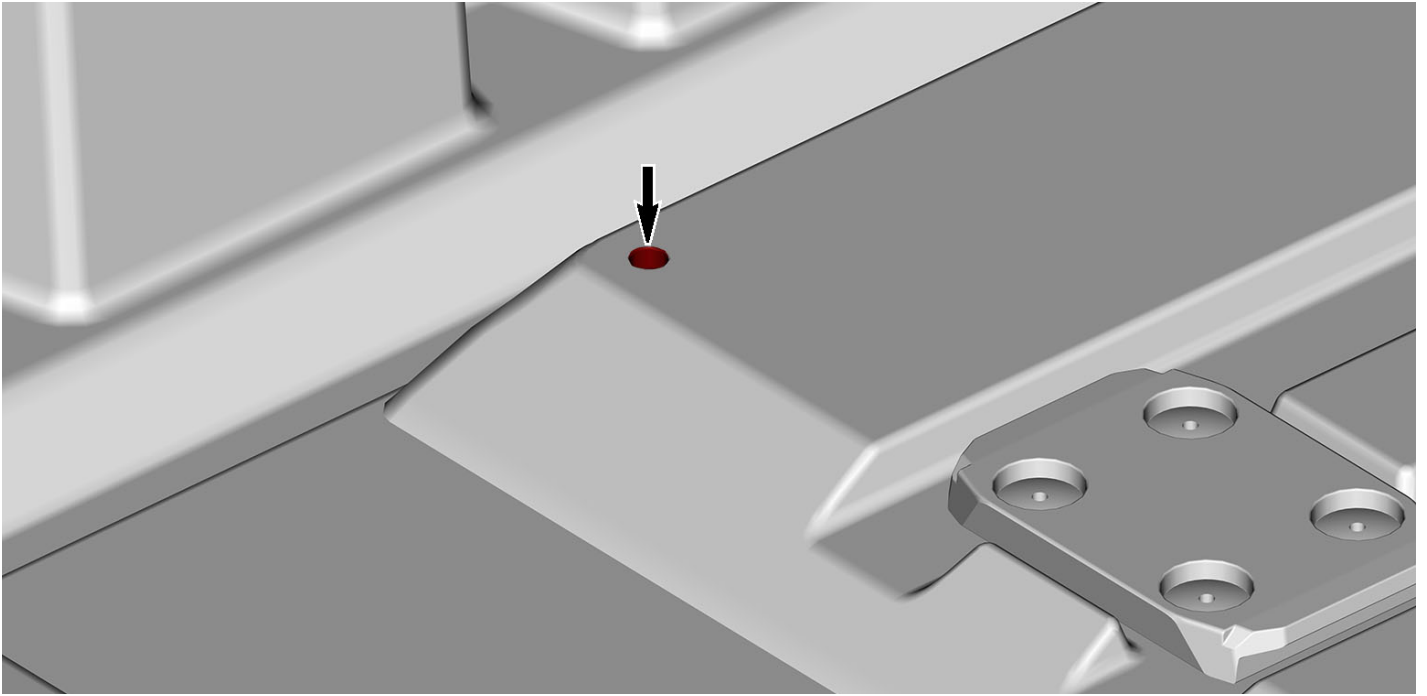

LH SIDE SHOWN

6. Install two (2) M6 X 50 Torx screws [P4], two (2) M6 flat washers [P5] and two (2) M6 flanged nut [P6]. Tighten to specification.

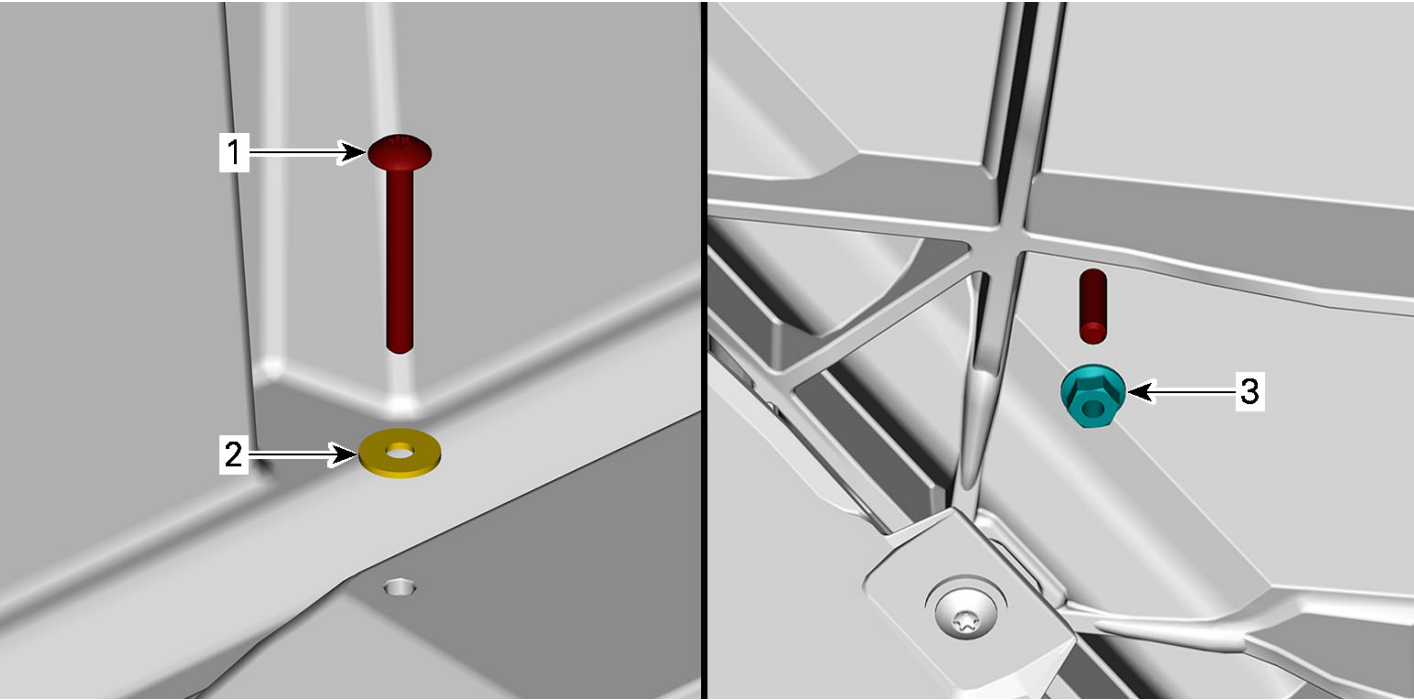

LH SIDE SHOWN

- 1. M6 X 50 Torx screw [P4]
- 2. M6 Flat washer [P5]
- 3. M6 Flanged nut [P6]

TIGHTENING TORQUE	
M6 X 50 Torx screw [P4]	4.5 ± 0.5 N•m (40 ± 4 lbf•in)

NOTE
Refer to Instruction Sheet 487804217 Fastener LinQ Kit for accessories installation.