



INSTRUCTION SHEET

Can-Am Off-road

AUGUST 17, 2026
487804532 | VERSION A

LinQ Vertical Support - Plate Only

TIME FOR COMPLETION: 0.5 HOUR

The following symbols may be used in this document:

DANGER

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

WARNING

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

CAUTION

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE

Indicates an instruction which, if not followed, could severely damage vehicle components or other property.



WARNING

- This kit is designed for specific applicable models only (authorized BRP dealers will confirm model(s)). It is not recommended for units other than the one (those) for which it was sold.
- If the installation of the kit requires a template, ensure template is to scale.
- Should removal of a locking device (e.g. lock tabs, self-locking fasteners, etc.) be required when undergoing disassembly/assembly, always replace with a new one.
- Torque wrench tightening specifications must strictly be adhered to.
- Always wear EYE PROTECTION AND APPROPRIATE GLOVES when using power tools.
- Always be aware of parts that can move, such as wheels, transmission components, etc.
- Some components may be HOT. Always wait for all components to cool down before performing work.
- Unless otherwise specified, engine must be OFF when performing any operation on the vehicle.

WARNING

Some important safety information and/or operating instructions dedicated to the end user might be included in this instruction sheet. Make sure to give the kit part number as well as the instruction sheet included with this kit to the customer. Verify that the customer has access to all the information required for proper use of the accessory.

NOTE

USE TIGHTENING TORQUES IN THE FOLLOWING TABLE IF NOT OTHERWISE SPECIFIED.

–	GRADE			
–	5.8	8.8	10.9	12.9
M4	1.8 N•m ± 0.2 N•m	2.8 N•m ± 0.2 N•m	3.8 N•m ± 0.2 N•m	4.5 N•m ± 0.5 N•m
	(16 lbf•in ± 2 lbf•in)	(25 lbf•in ± 2 lbf•in)	(34 lbf•in ± 2 lbf•in)	(40 lbf•in ± 4 lbf•in)
M5	3.3 N•m ± 0.2 N•m	5 N•m ± 0.5 N•m	7.8 N•m ± 0.7 N•m	9 N•m ± 1 N•m
	(29 lbf•in ± 2 lbf•in)	(44 lbf•in ± 4 lbf•in)	(69 lbf•in ± 6 lbf•in)	(80 lbf•in ± 9 lbf•in)
M6	7.5 N•m ± 1 N•m	10 N•m ± 2 N•m	12.8 N•m ± 2.2 N•m	16 N•m ± 2 N•m
	(66 lbf•in ± 9 lbf•in)	(89 lbf•in ± 18 lbf•in)	(113 lbf•in ± 19 lbf•in)	(142 lbf•in ± 18 lbf•in)
M8	15.3 N•m ± 1.7 N•m	24.5 N•m ± 3.5 N•m	31 .5 N•m ± 3.5 N•m	40 N•m ± 5 N•m
	(135 lbf•in ± 15 lbf•in)	(18 lbf•ft ± 3 lbf•ft)	(23 lbf•ft ± 3 lbf•ft)	(30 lbf•ft ± 4 lbf•ft)
M10	29 N•m ± 3 N•m	48 N•m ± 6 N•m	61 N•m ± 9 N•m	73 N•m ± 7 N•m



	(21 lbf•ft ± 2 lbf•ft)	(35 lbf•ft ± 4 lbf•ft)	(45 lbf•ft ± 7 lbf•ft)	(54 lbf•ft ± 5 lbf•ft)
M12	52 N•m ± 6 N•m	85 N•m ± 10 N•m	105 N•m ± 15 N•m	128 N•m ± 17 N•m
	(38 lbf•ft ± 4 lbf•ft)	(63 lbf•ft ± 7 lbf•ft)	(77 lbf•ft ± 11 lbf•ft)	(94 lbf•ft ± 13 lbf•ft)
M14	85 N•m ± 10 N•m	135 N•m ± 15 N•m	170 N•m ± 20 N•m	200 N•m ± 25 N•m
	(63 lbf•ft ± 7 lbf•ft)	(100 lbf•ft ± 11 lbf•ft)	(125 lbf•ft ± 15 lbf•ft)	(148 lbf•ft ± 18 lbf•ft)
M16	126 N•m ± 14 N•m	205 N•m ± 25 N•m	255 N•m ± 30 N•m	305 N•m ± 35 N•m
	(93 lbf•ft ± 10 lbf•ft)	(151 lbf•ft ± 18 lbf•ft)	(188 lbf•ft ± 22 lbf•ft)	(225 lbf•ft ± 26 lbf•ft)
M18	170 N•m ± 20 N•m	273 N•m ± 32 N•m	330 N•m ± 25 N•m	413 N•m ± 47 N•m
	(125 lbf•ft ± 15 lbf•ft)	(201 lbf•ft ± 24 lbf•ft)	(243 lbf•ft ± 18 lbf•ft)	(305 lbf•ft ± 35 lbf•ft)

 NOTE


The illustrations in this document show typical construction of the different assemblies and may not reproduce the full detail or exact shape of the parts; however, they represent parts that have the same or similar function. In the pictures below, parts may have been removed for clarity purposes.

REQUIRED TOOLS

REQUIRED TOOLS			USE
T1	Riveting tool		To install M6 X 1.0 threaded inserts with the riveting adaptor



PARTS TO BE INSTALLED

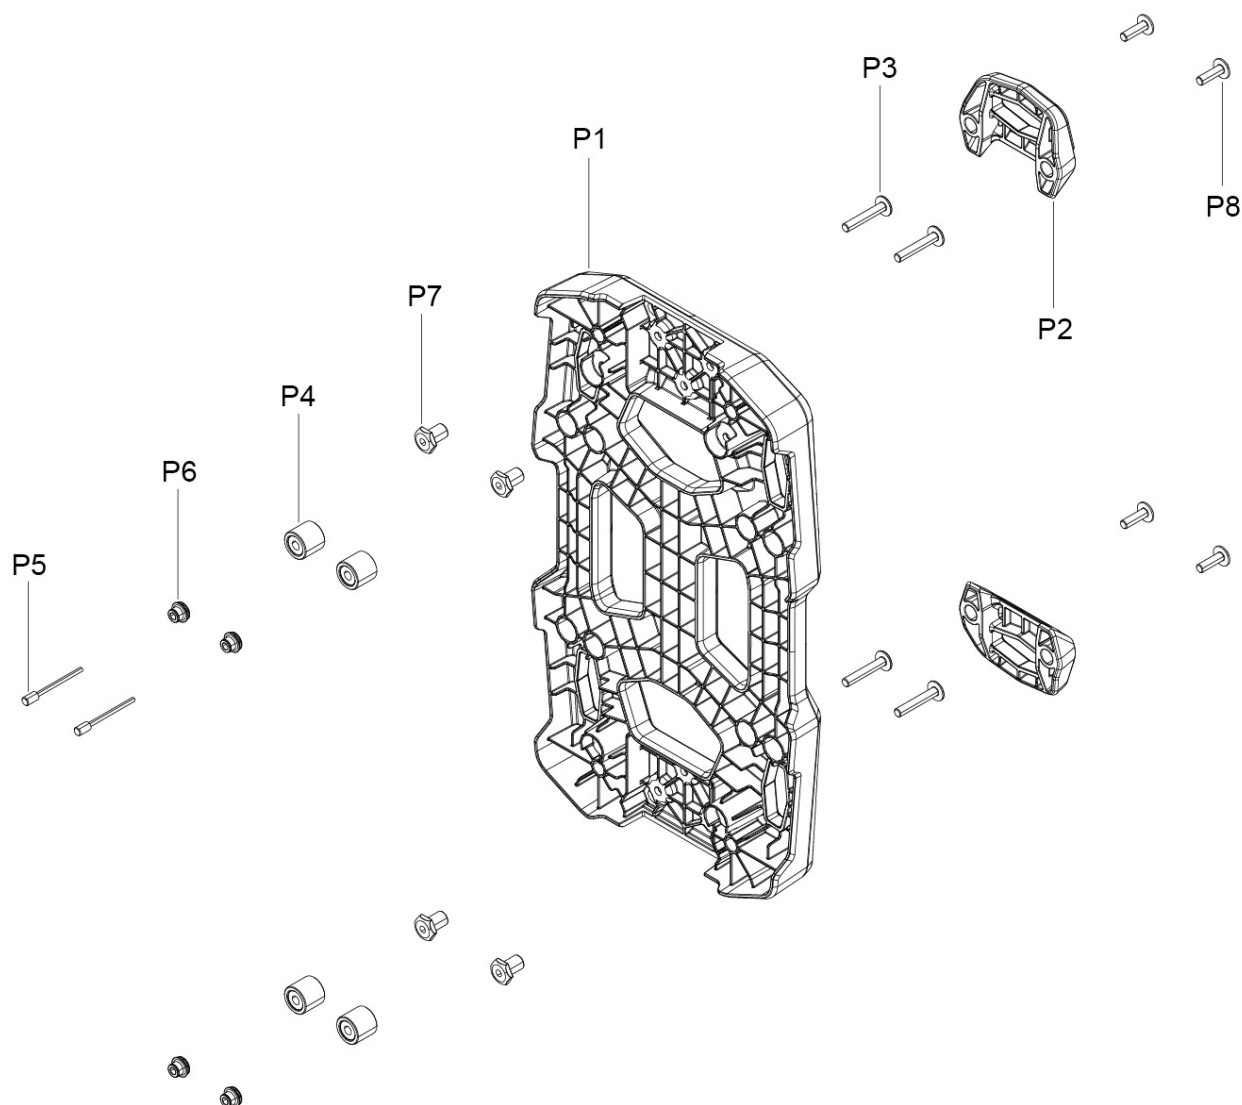


ITEM	DESCRIPTION	PART NUMBER	QTY
P1	Accessory support	Not available separately	1
P2	LinQ anchor	See service kit	2
P3	M6 X 35 Torx screw	250001258	4
P4	Spacer	708305219	4
P5	Riveting adapter	705202624	2
P6	M6 X 1.0 Threaded insert	250100199	4
P7	Insert	511000822	4



ITEM	DESCRIPTION	PART NUMBER	QTY
P8	M6 X 20 Torx screw	250000446	4
P9	Warning label (Not shown)	219906054	1

SERVICE PARTS

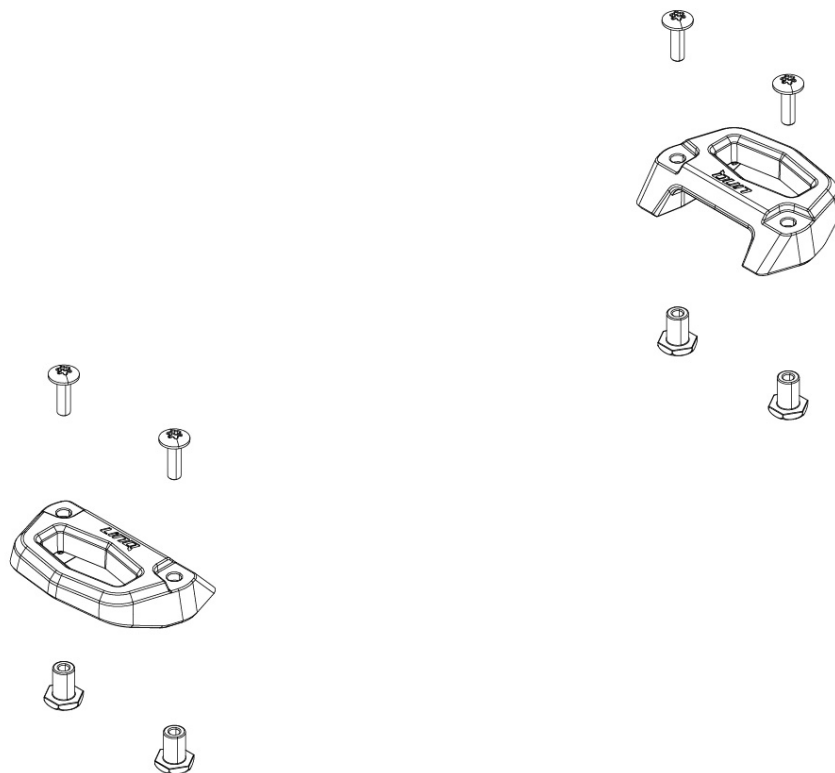


ITEM	DESCRIPTION	PART NUMBER	QTY
S1	LinQ Base Installation Kit	860203055	1

INSTALLATION INSTRUCTIONS

1. Insert four (4) M6 X 35 Torx screws [P3] in the accessory support [P1].



2. Install two (2) LinQ anchors [P2] and secure using four (4) M6 X 20 Torx screws [P8] and four (4) inserts [P7]. Tighten to specification.

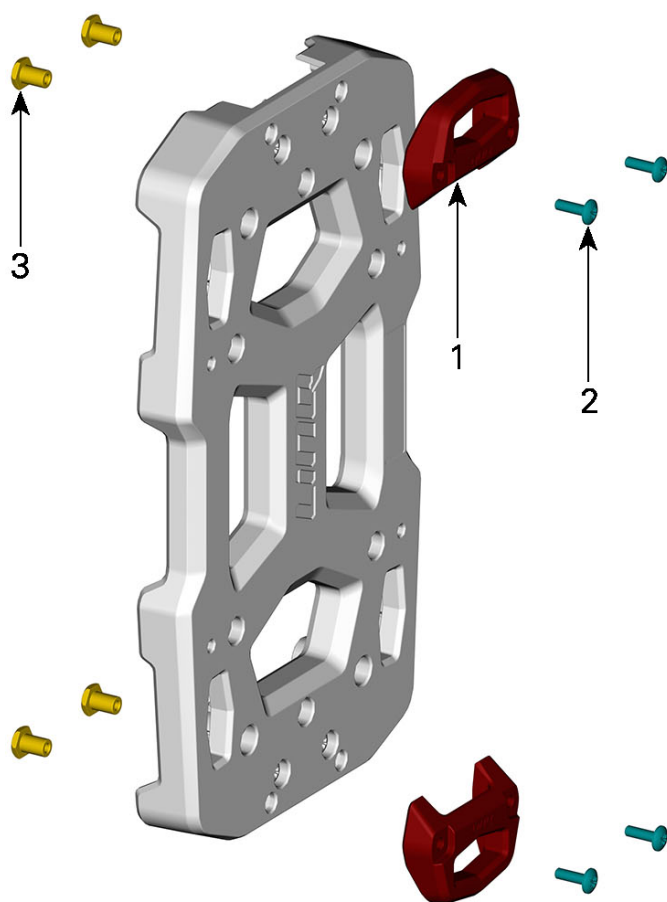


1. LinQ anchor [P2]
2. M6 X 20 Torx screw [P8]
3. Insert [P7]



TIGHTENING TORQUE	
M6 X 20 Torx screw [P8]	7.5 ± 0.5 N•m (66 ± 4 lbf•in)

3. Choose the desired position to install this kit.

NOTE
The illustration is showing the LH side. It can also be installed on the RH side with the same configuration.

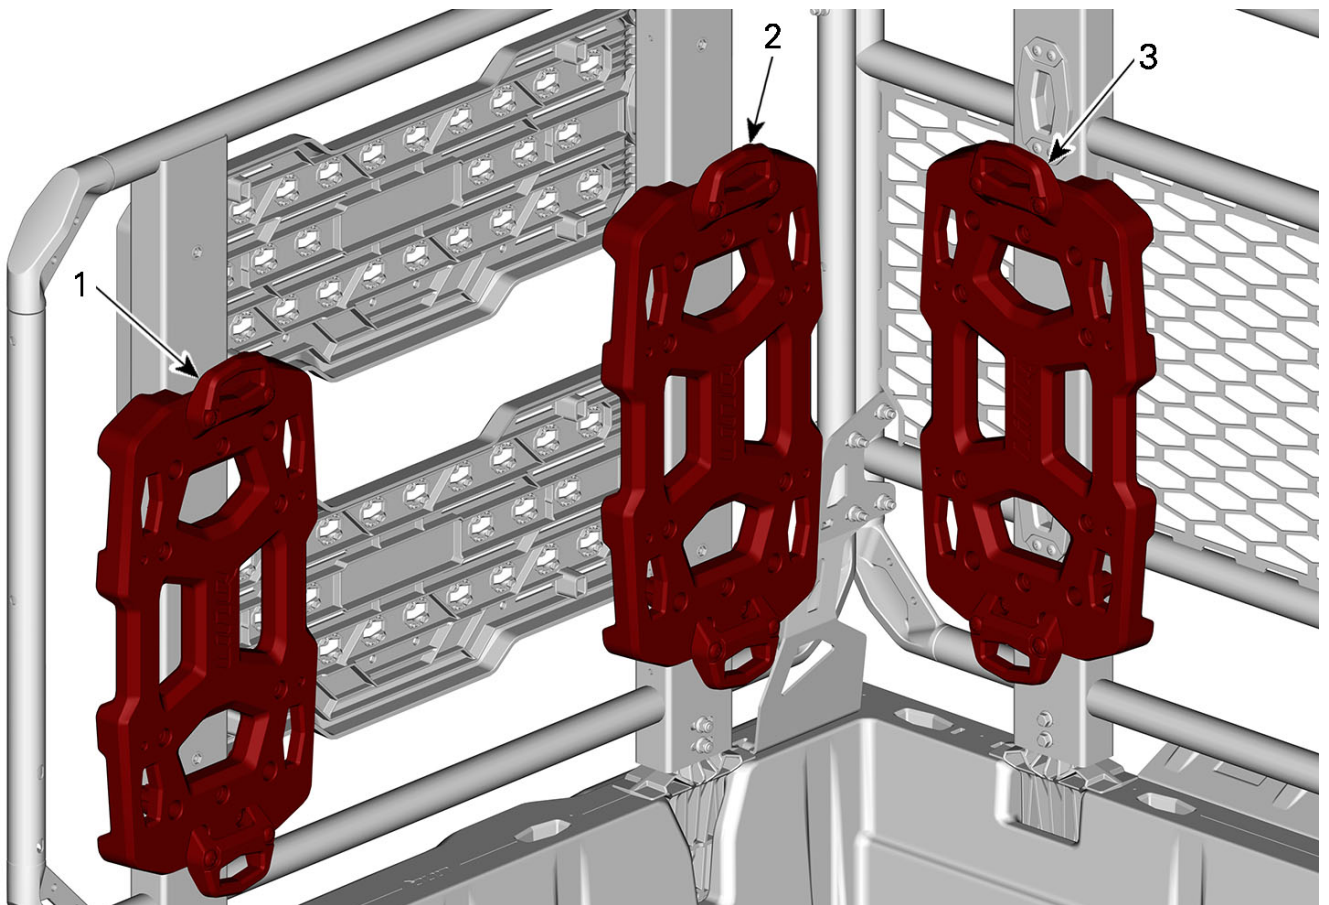



1. Position 1

2. Position 2

3. Position 3

4. Install four (4) M6 X 1.0 threaded inserts [P6] with riveting adapter [P5] and riveting tool [T1] to the position previously chosen.




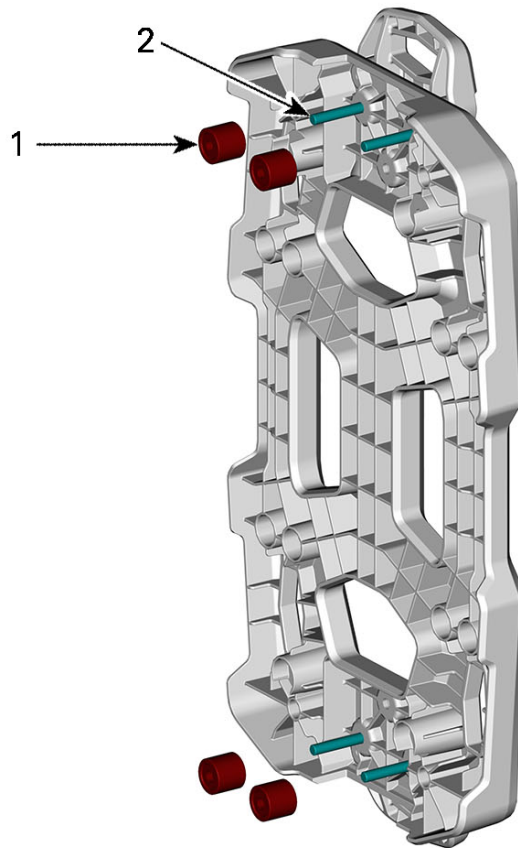


1. *Spacer [P4]*

2. *M6 X 35 Torx screw [P3]*

6. Screw down the two (2) top M6 X 35 Torx screws [P3] in M6 X 1.0 threaded inserts [P6] to the position chosen on step 3. Tighten to specification.

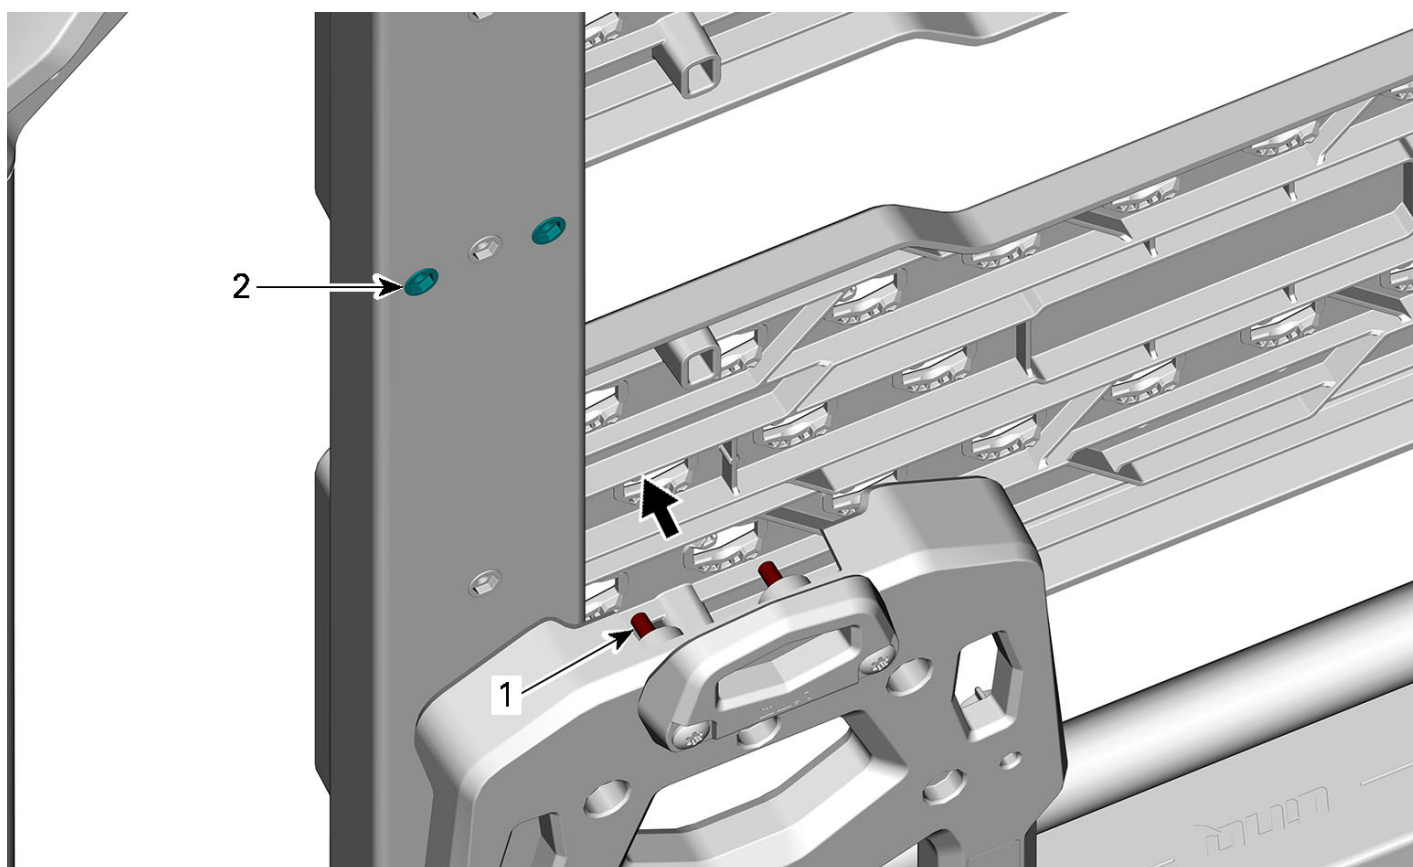

1. M6 X 35 Torx screw [P3]
2. M6 X 1.0 threaded insert [P6]

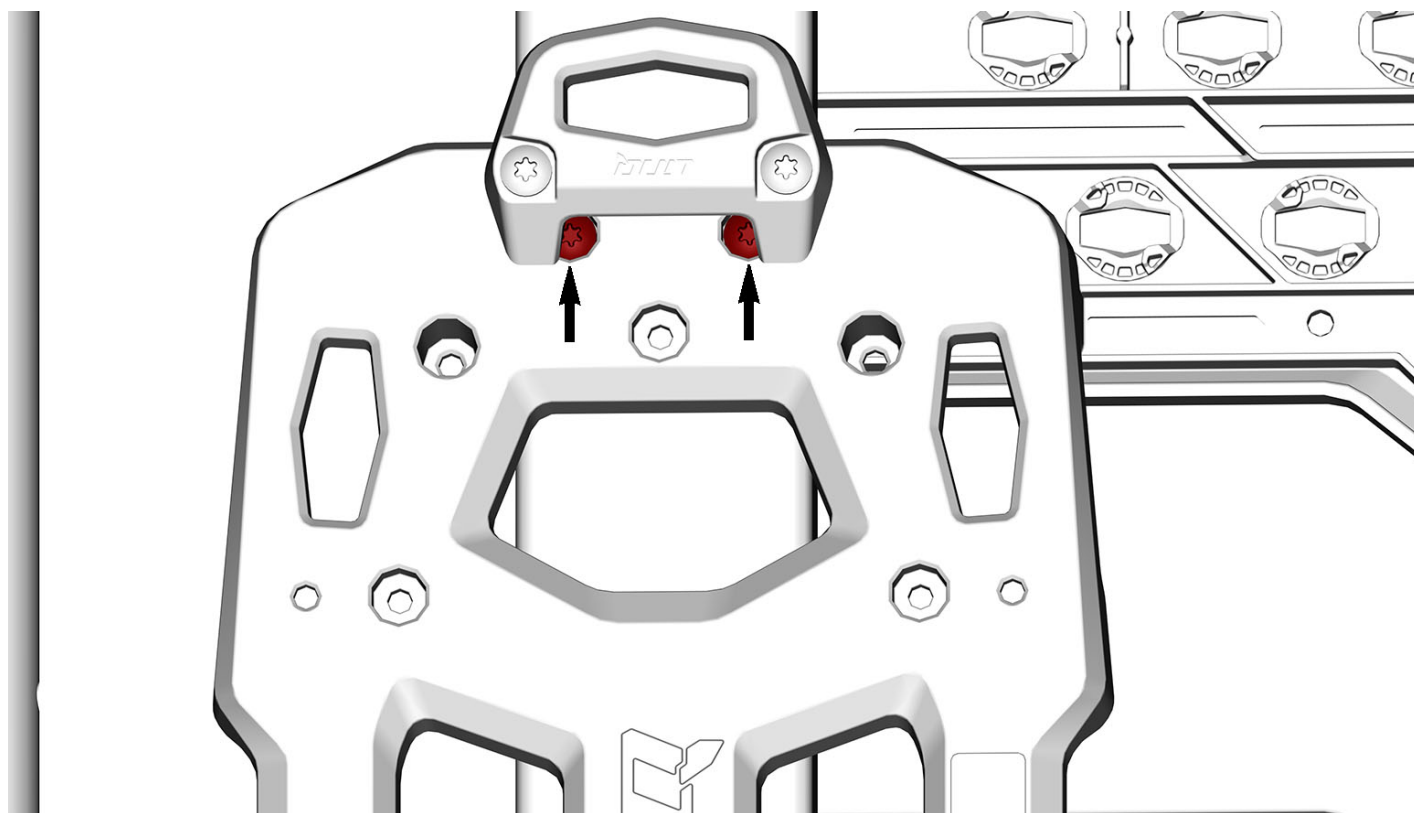**TIGHTENING TORQUE**

M6 X 35 Torx screw [P3]

 $7.5 \pm 0.5 \text{ N}\cdot\text{m}$ ($66 \pm 4 \text{ lbf}\cdot\text{in}$)


7. Repeat step 6 for the two (2) bottom M6 X 35 screws [P3] in M6 X 1.0 threaded inserts [P6].


! WARNING

Ideally, the accessories should be inside the zone of the cargo box. However, some small accessories may be on the exterior side of the vehicle.


ACCESSORIES INSTALLATION

1. Insert the accessory base tip between the bottom LinQ anchor [P2] and the accessory support [P1] as shown below. The toe in must use the lower LinQ.

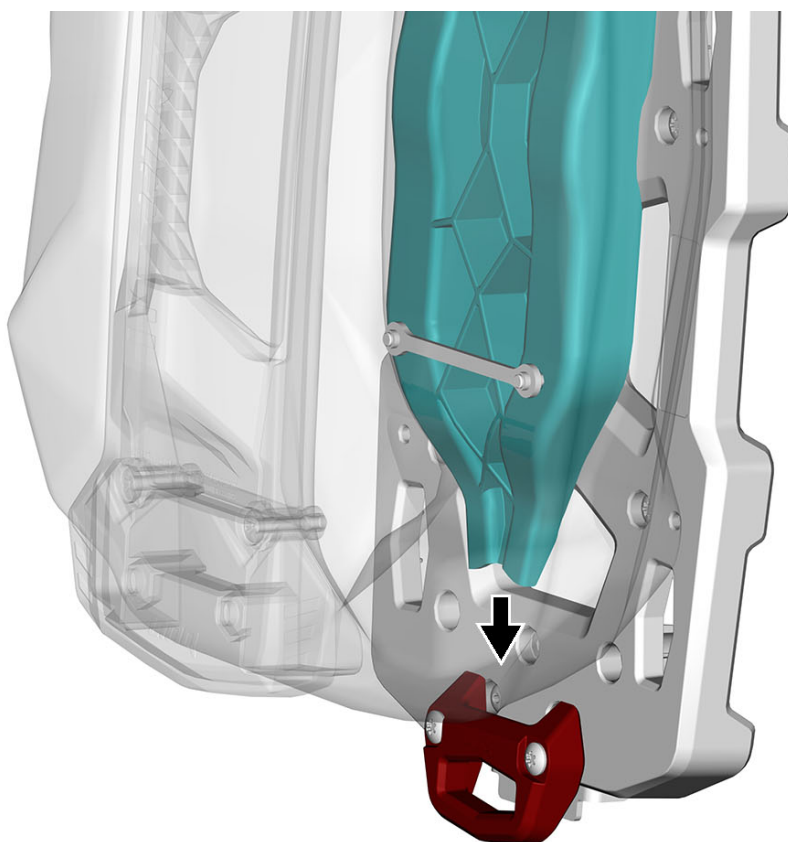

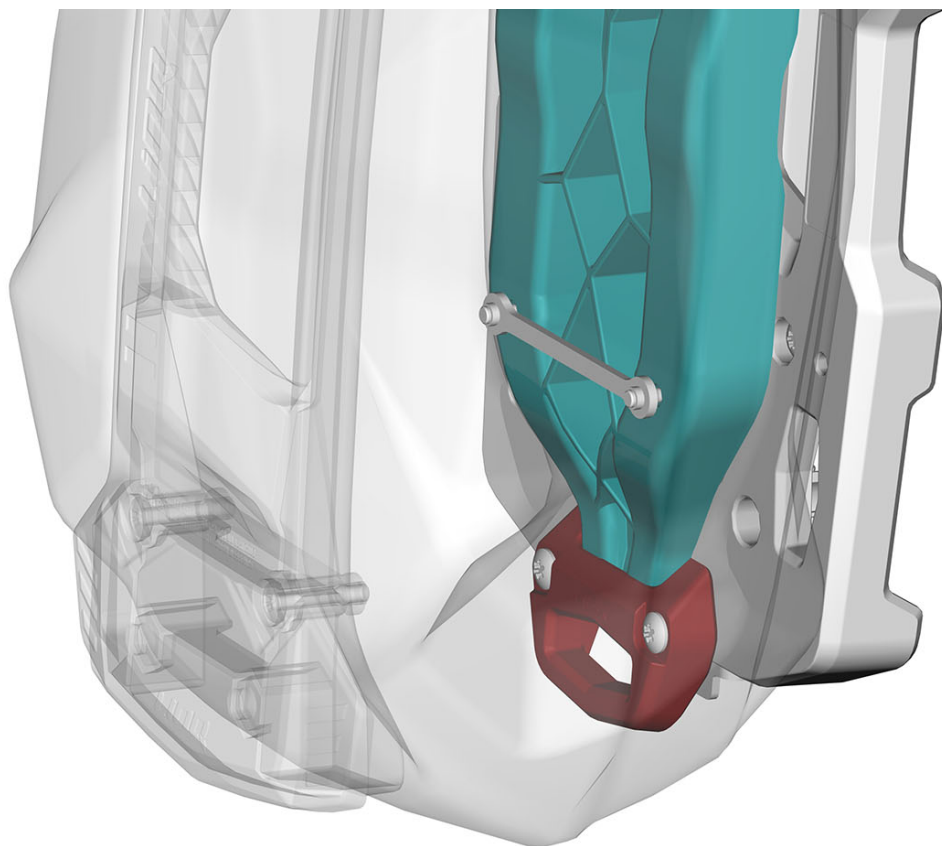

2. Open LinQ lever, insert LinQ pivot in the top anchor [P2] then close and secure LinQ lever as shown below.

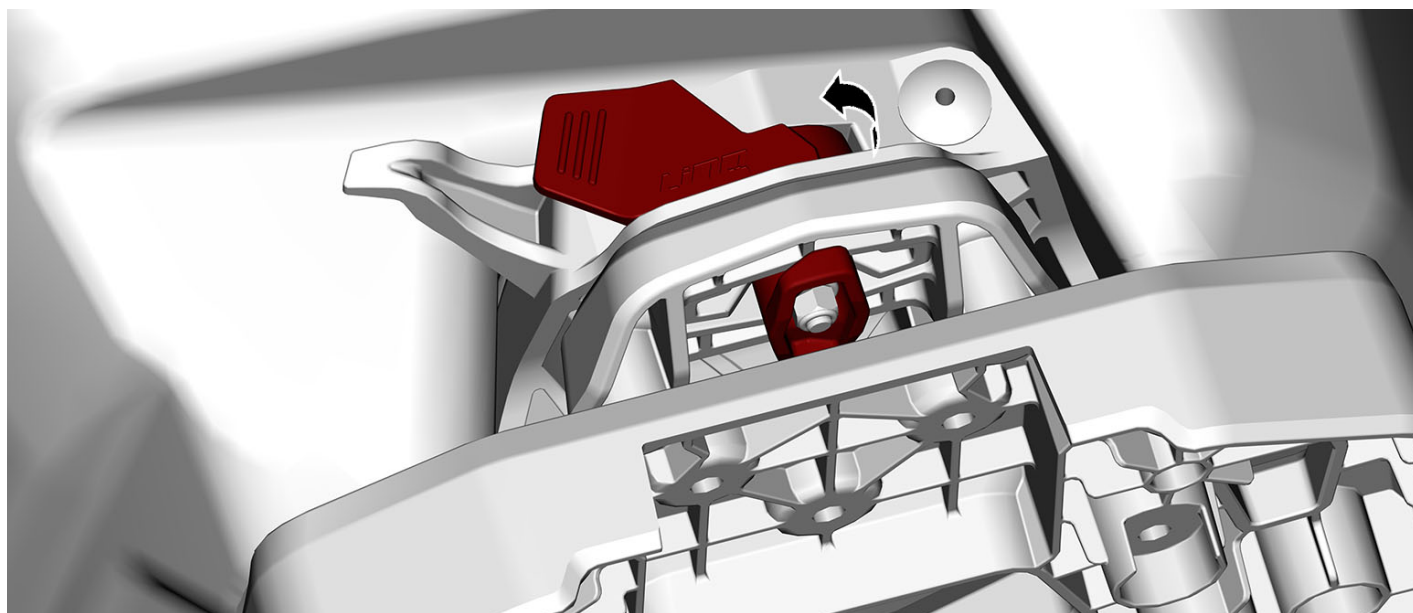

SAFETY LABEL

The product comes with the following label containing important safety information.

The label should be considered a permanent part of this product. If the label comes off or becomes hard to read, please contact an authorized dealer for FREE OF CHARGE replacement.

Any person who intends to use this product should read and understand the information contained on the label before doing so.




! WARNING

Max 25 cm (10 in).

Do not exceed 20 kg (45 lb).

219906054

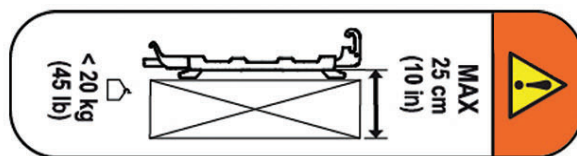

WARNING LABEL LOCATION

